

## Amplified Telephone with SOS Emergency Calls

English



**NOTE:**

This phone may be used by people with hearing problems. It has a variable volume headset until 40dB. On first use, make sure that the headset volume is set to minimum. The hearing impaired person may subsequently increase the volume to suit their needs.



Please refer to our website: **[www.geemarc.com](http://www.geemarc.com)** for an up to date user guide, as there may be important updates and changes you need to be aware of!

# Contents

<b>Contents</b> .....	<b>3</b>
<b>Prior To Use</b> .....	<b>5</b>
- Congratulations .....	5
- Safety Precautions .....	6
- Setting Up .....	7
Check the contents of the box .....	7
Choosing a location .....	7
Adapter installation .....	7
- Connecting the Telephone .....	8
- Wall mounting .....	9
- Location of controls .....	10
- Keys description .....	11
- LCD description .....	12
<b>Menu Functions</b> .....	<b>14</b>
- Ringer level settings .....	14
- Menu navigation .....	14
- Making a call.....	14
- Dialing a number from the redial list .....	14
- Dialing the last number dialed .....	15
- Dialing a number from the phonebook .....	15
- Dialing a number from the caller list .....	15
- Dialing a number from one picture memory key .....	15
- Receiving a call .....	15
- Muting the microphone .....	16
- Using the amplification function .....	16
- Using your phone with hearing aids .....	17
- Hands free mode .....	17
- Flash signal.....	17
- Caller ID function .....	18
Displaying phone numbers in the calls list.....	18
Storing numbers from the calls list in the phone book .....	18
Deleting phone numbers individually .....	18
Deleting all entries .....	18
- Menu map .....	19

<b>Phone Setting</b>	<b>20</b>
1) LCD Contrast setting	20
2) Ringer setting	20
3) Alarm bracelet	20
4) Flash time setting	21
5) Voice function	21
6) Language setting	22
7) Playing the outgoing SOS message	22
8) Recording the outgoing SOS message	22
Deleting the outgoing alert message	23
9) Record an contact in phonebook or SOS list	23
a) Phonebook	23
Character Map	23
Creating phone book entries	24
Record a voice name to phone book entrie	24
Deleting recording from one phone book contact	24
Editing entrie in the phone book	25
Deletign a single entry from the phone book	25
Delete all entries from the phone book	25
Creating memory picture key	26
b) SOS function	26
Record a SOS phone number	26
SOS emergency dialing	27
Battery replacement	27
Range	28
10) Time and Date Setting	28
<b>TECHNICAL SPECIFICATIONS</b>	<b>29</b>
<b>FEATURES</b>	<b>29</b>
<b>Troubleshooting</b>	<b>30</b>
<b>Safety Information</b>	<b>31</b>
<b>Guarantee</b>	<b>32</b>
<b>Recycling Directives</b>	<b>33</b>

# Prior To Use

## Congratulations

---

Congratulations on purchasing our product.

Please read the manual carefully to learn all about the features available and how your telephone works. This will help you to get the best of your new phone.



## **Safety Precautions**

---

To prevent any risk of electrical shock and injury, please follow these basic safety precautions before using the phone:

1. Carefully read and observe the instructions in this manual.
2. The phone is capable of amplifying sounds to a loud volume. It is important to instruct all potential users of its proper operation. It is advised to adjust the volume control to its minimum level (Low) when not in use and alert other users that hearing damage can potentially result from misuse.
3. When cleaning, first unplug the phone. Then use a damp cloth to wipe it. Do not use liquid or aerosol cleaners.
4. Do not place objects on the line cord as this may cause damage.
5. Do not use this phone in wet surroundings or environments where there is a risk of explosion.
6. Refer servicing to qualified service personnel only.
7. Use only the power supply provided.
8. Install the telephone where no one will step or trip on the cord.
9. Do not overload wall outlets or extension cords as this can increase the risk of fire or electrical shock.
10. Never push any objects through the slots in the telephone. They can touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock.
11. Never spill liquid of any kind on the telephone.

## Setting Up

---

### **CHECK THE CONTENTS OF THE BOX**

Box should contain:

- Handset with handset cord and phone base
- Telephone line cord
- 4 Alkaline batteries AA 1.5V
- User's manual
- Remote for emergency call with his battery CR2025
- Adapter (9VDC 0.2A)
- Wall mount bracket

### **CHOOSE A LOCATION**

The unit should be located in an area where it is easy to see the visual display and lighted ringer.

Choose a location that is out of the way of normal daily activities so that it is not knocked or there is no danger of tripping over wires.

### **ADAPTER INSTALLATION**

For using all features e.g. Hands-Free and Amplification, it is essential that the telephone is powered by the power supply or the batteries.

Insert the batteries in the open battery compartment who is located at the back of the base.

Unclip the battery door with a screw driver in the hole.

 
Only use batteries of the type AA 1.5 V provided with the phone.

Pay attention to the correct polarity. Close the battery compartment cover.

Pay attention that the telephone is not connected to the telephone line socket and/or mains power connection when the batteries are being inserted or replaced.

## Connecting the telephone

- Connect the handset cord (1).
- Unclip the battery door with a screw driver in the hole.  
Insert 4 x AA alkaline batteries (2). In case of power failure, batteries are required for the ring.
- Snap the battery door back in place.
- Connect the line cord at the back of the base (\*) (3).
- Connect the other side of line cord plug to the wall socket or internet box (\*) (3)
- Connect the adaptor cord to the telephone (4).
- Connect the adaptor to you wall socket (\*\*) (4).

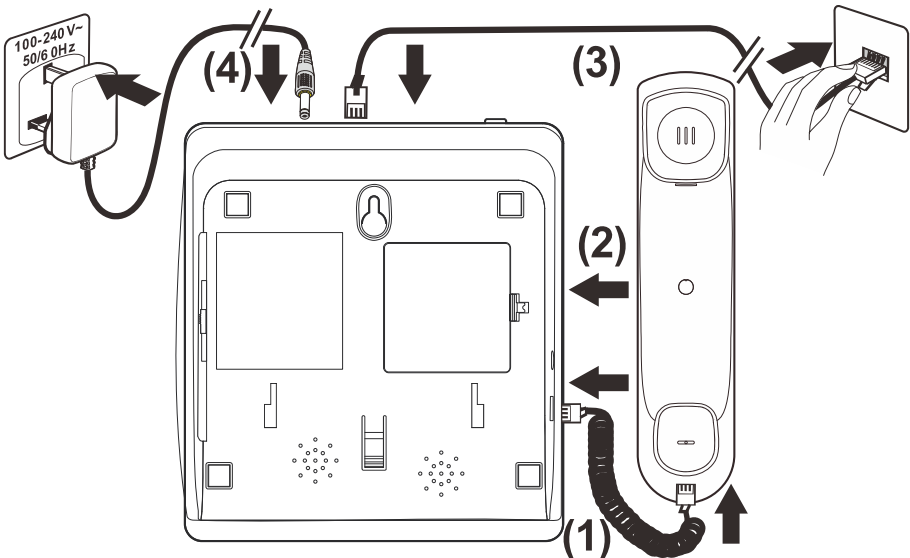


(\*) Classified TNV-3 according to EN62368-1 standard.

(\*\*) Classified "hazardous voltage" according to EN62368-1 standard.

# Prior To Use
 
## Wall mounting

The telephone can also be installed on a wall. You require two screws in order to fix the telephone on a wall.

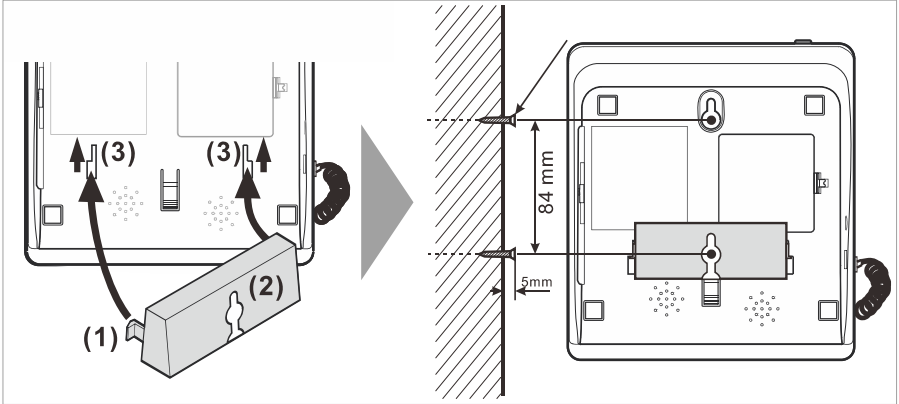


Wall mount template  
84 mm

Feed the guide tabs (1) on the wall-mounting bracket (2) in the slots (3) on the rear side of the telephone. Slide the wall bracket (2) 10mm upwards until it audibly snaps into place.


**Warning: Ensure that there are no cables or pipes etc. under the surface of the wall where you want to drill the holes.**

  Drill two holes whose distance **84mm** in vertical, insert the screws and allow them to project **5mm** from the wall.

Position the telephone on the bracket, fit the screws in the slots and slide the telephone downwards a little.

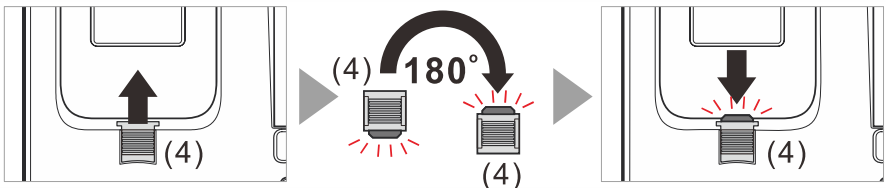



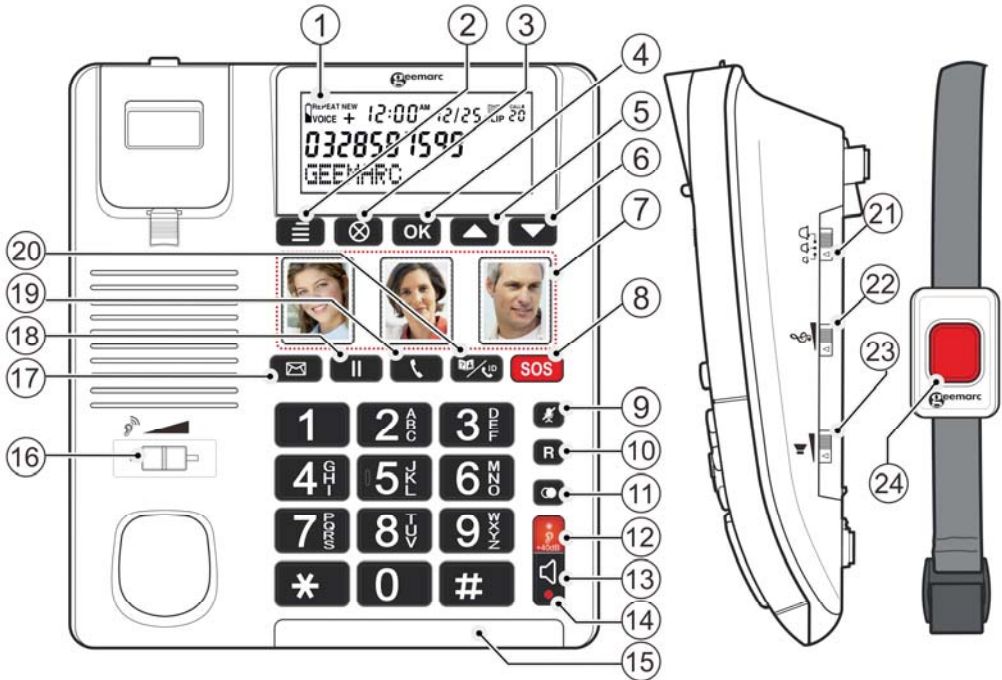











Turn the receiver hook (4) in the receiver cradle **180°** so that the receiver can be hooked in.



1. LDC screen	13. Handsfree mode button
2. Menu button	14. Handsfree mode indicator
3. Delete button	15. Incoming ring indicator/new call
4. OK button	16. Slide receiver volume (hidden under handset)
5. Scroll upwards	17. One-touch dialling button (mail box)
6. Scroll downwards	18. Pause button or redial
7. Photo keys (x3)	19. Dial button
8. SOS button	20. Call list (CLIP) / Phone book
9. Microphone mute button	21. "Ringing volume" control
10. R(Call waiting) button	22. "Tone" control
11. Redial button	23. "Handsfree volume" control
12. Receiver +40 dB boost button	24. Emergency call unit / accept the incoming call

## Keys Description

	<p>Make / Answer / End a call.</p> <p>Activates the speakerphone if pressed during a call, as described in page 17.</p> <p>The LED is ON to inform you that the function is activated.</p>
	<p>Last number redial, as described in page 15.</p> <p>When you dial a phone number, press this key to insert an Pause.</p>
	<p>Highlight or scroll through the menu options.</p> <p>Enter the CID or phonebook list.</p>
	<p>When you press this key during the call, the LED turns ON to inform you that the boost is activated.</p>
	<p>Press and hold this key during a call to mute the microphone temporarily.</p>
	<p>The 3 pictures keys are used as one-touch speed dial keys.</p>
	<p>Press this key to change the mode (CID list or Phonebook)</p> <p>Press this key to exit .</p>
	<p>This key is used to disconnect a call and reestablish dial tone or to switch over to another caller if you use custom calling services such as call waiting.</p>
	<p>This key is used for emergency dialling.</p>
	<p>This key allow you to access to your voicemail (the number need to be inputed at first start)</p>
	<p>When you dial a phone number, press this key to insert an Pause.</p>
	<p>Press this key to choose a contact in CID list or phonebook list. Your call will be in speakerphone mode.</p>

	<p>Press this key to enter in Menu.</p> <p>Press this key to access to the function <b>EDIT</b> when you are in Phonebook contact.</p> <p>Press this key to access at the function <b>DELETE</b> or <b>DELETE ALL</b> when you are positioned on <b>CID</b> number.</p>
	<p>Press OK to confirm your selection.</p> <p>Press OK to start a call when the contact is selected.</p>

## LCD description



In standby mode, the LCD display will show as below:

New/SOS Hour Date CLIP/Phonebook mode



When a new call comes in, the screen will display the caller's phone number and name.

This shows you the total and new calls to be reviewed. In this example, you have 5 calls in total which includes 2 new calls.

Replace or insert the batteries.	
The phone book is open.	
The calls list is open.	"CLIP"
The entry in the calls list is new.	"NEW"
Indicates a repeat call.	"REPEAT"
Position number in the call list.	"CALL # / xx"
There are XX new entries in the call list.	"TOTAL : xx"
There are XX new entries in the call list.	"NEW : xx"
Flashing: Recording mode is active.	"VOICE"
SOS emergency icon.	" + "

# Prior To Use

In Emergency SOS dialing mode or while review Phone book, if you see this icon “+” means the numbers are Set as emergency number.

If the caller has exercised the option to prevent his name from being sent, "**OUT OF AREA**" will be shown on the display.

This message will display when someone calls from an area where the telephone company is not offering the caller identification services or is not yet providing number delivery to your area.

## Ringer level settings

---





A switch located on right side allows the ringer to be switched **HI**, **MIDDLE** or **LOW** position:

: Low, : Middle, : Hi.

## Menu Navigation

---

### To access a menu option:

1. To display menu list, press the **Menu**  soft key.
2. To scroll through menu options, press  or  key repeatedly.
3. To select a menu, press  key when the desired menu appears on the display.
4. Repeat if necessary.

### To exit from any menu:




If you press the “**CLIP/PB**”  key, the phone returns to the previous screen or in stand-by mode.

## Making a Call

---





1. To make a call, lift the handset, listen for a dial tone and adjust your volume & tone settings (see page 16).
2. You can dial a number manually or press one of the memory dial buttons. Please refer to page 15.
3. To end the call, replace the handset on the base.

You can enter a phone number in standby mode, Pre-dial allows you to make corrections before dialing. Follow these steps:

1. Enter a telephone number (up to 32 digits). Check it. If you make a mistake while entering a number, press the  key to edit it.
2. When the number appears correctly, lift the handset or press the  key or press  key.

## Dialing a Number from the Redial List

---

Press  Key then press  or  to show and find the five last numbers that have been dialed, then press  key to redial.

# Menu Functions



## Dialing the last Number dialed




---

Lift the handset or press on  key and press  key to dial the last number dialed.

## Dialing a Number from the Phonebook


---




Make sure “” icon is showed on the top right display. If not, press “**CLIP/PB**”  key, you should hear “**PHONEBOOK**”.

Press  or  to show and find your contact, then press  key to start the call in speakerphone mode.

## Dialing a Number from the Caller List

---

Make sure “**CLIP**” icon is showed on the top right display. If not, press “**CLIP/PB**”  key, you should hear “Caller ID list”.


Press  or  to show and find your contact, then press  key to start the call in speakerphone mode.

## Dialing a Number from one picture memory key

---

Your phone allow you to program 3 frequently dialed numbers in memory pictures keys. Each photo memory key can store up to 24 digits.


To store one memory picture key, go to **page 26** .


1. Lift the handset or press .
2. Press the memory picture key desired and your number is dialed automatically.

## Receiving a Call

---


When a new call is received the phone will ring and the Visual ring indicator will flash.


1. To answer a call, lift the handset or press on  or press the remote button and speak.  
If you press on remote SOS button, your phone is in speakerphone mode.
2. Adjust your volume & tone settings if required (see page **16**).

3. To end the call, replace the handset on the base or press .


## Muting the Microphone

During a conversation, you can temporarily switch your phone's microphone off. The other party will not be able to hear you.

**To mute your microphone**, press and hold the  key during the conversation. Your microphone is mute.



**To unmute your microphone**, Release the  key. You can resume your conversation with the other caller.

 
 
## Using the Amplification Function


You can increase the volume and adjust the receiving tone according to your own hearing requirements. The button **+40dB**  allows extrareceiving and tone functions to be activated or not during the conversation.

When the function is activated, the red light located on the button

 is lit. Adjust the **TONE** and **VOLUME** buttons with  and

  to adjust the level to your own hearing requirements.

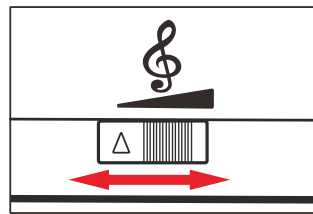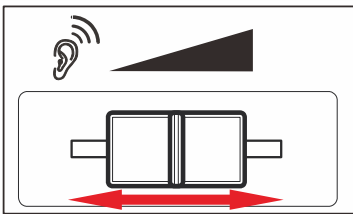

**Note :** you will need to activate the function by pressing the button **+40dB**  to use the function Tone and the receiving amplification.

**CAUTION:** This telephone can produce very high (loud) sound levels. Repeated incremental exposure to amplification levels greater than 18 dB may be harmful to people without hearing loss. Always adjust the volume control to the minimum setting after using the phone.

# Menu Functions

## Using your Phone with hearing aids

---


Your phone can be used with hearing aids equipped with a telecoil (T-coil). Adjust your hearing aid "T-switch" position. Make sure to hold the handset close to your hearing aid.

## Hands-free


---

During a call, you may turn on the speakerphone that is built into the phone. In this mode you can enjoy the comfort of a hands-free conversation.

**To turn the feature on**, press the  key during a call, then replace the handset on the base. The Red LED  icon is activated.


**To turn the feature off**, simply pick up the handset and you can keep on talking via the handset. The LED  icon will turn off.

## Adjusting Speaker Volume

In speaker mode you can adjust the speaker volume by using the Volume Controls  located on the right side of the phone.

## Flash Signal

---

When the line is engaged, pressing the **R** key  sends the flash signal. This key is used in conjunction with special services (e.g. call waiting) which can be available in your phone network. For further details please contact your network telephone company.

To use the said special services, just press the **R** key while the line is engaged.

## Caller ID

---


This telephone automatically displays an incoming caller's number / name along with the date and time of the call. It will record up to 64 calls and store the data into memory.


**IMPORTANT:** You must subscribe to Caller ID Service from your local telephone company to utilize this feature.

The flashing red LED indicates new calls in the calls list. **This LED will flash as long as there are still new (not read) calls in the calls list.**








To stop flashing press  repeatedly until to look all new call.

### Displaying phone numbers in the calls list





Make sure “CLIP” icon is showed on the display. If not, press **CLIP/PB**  key, you should hear “Caller ID list”

- Select an entry using  or  key.

### Storing numbers from the calls list in the phone book


1. Select an entry using  or  key.
2. Press and hold  key and confirm SAVE TO NUMBER with  key.
3. Check the phone number displays then press  key to valid.
4. Enter a name for the phone number then press  key to valid.
5. Select “No Alert Number” then press  key.





### Deleting phone numbers individually

- Select an entry using  or  key.
- Press . The display shows **DELETE?**.
- Press  again. The entry is deleted.

# Menu Functions

## Deleting all entries

Make sure “CLIP” icon is showed on the display. If not, press **CLIP/PB**  key, you should hear “Caller ID list”.

- Select an entry using  or  key.
- Press and hold  key. The display shows **DELETE ALL?**.
- Press  again. The entries are deleted.

**Note: Before deleting the phone numbers, check that the entries have been viewed.**

## Menu Map

---

/ LCD CONTRAST

/ RINGER

/ ALARM BRACELET

/ FLASH

/ VOICE

/ LANGUAGE

/ CHECK MESSAGE

/ RECORD MESSAGE

/ NAME RECORDING







/ STORE NUMBER

/ TIME & DATE

## Phone setting









---

### 1) LCD Contrast Setting

- Press  soft key to display the main menu list.
- Press  key to access **LCD CONTRAST**.
- Press  key to valid.
- Press  or  key repeatedly to choose among the 5 available contrast levels and then press  soft key.

### 2) Ringer melody setting

You can select your own base ringer tone.






- Press  soft key to display the main menu list.
- Press  key to move to **RINGER** then press  key.
- Press the  or  key repeatedly to select the desired ringer tone. Each time you press the  or  key, the phone rings with the selected ringer tone.
- Press  key to confirm and return to the previous menu.

**WARNING: RING VOLUME IS VERY LOUD AND CAN DAMAGE YOUR HEARING. NEVER PUT YOUR EAR CLOSE TO THE RINGER.**




### 3) Alarm Bracelet

You can add or delete emergency call unit




#### Add an emergency call unit

- Press  soft key to display the main menu list.
- Press  key to move to **ALARM BRACELET** then press  key.
- When you see **PAIRING** press  key, you will see **PAIRING**.
- Press Pendant button. If Pendant is successful paired, you will see **PAIRED**.
- Press  key to exit.









#### Delete emergency call unit

- Press  soft key to display the main menu list.
- Press  key to move to **ALARM BRACELET** then press  key.

# Phone Setting

- Press  key to move to **DELETE?**, press  key, you will see **DELETE ALL?**.  
All paired Emergency call units will be deleted.
- Press  key to exit



## 4) Flash Time Setting

- Press  soft key to display the main menu list.
- Press the  key to move to **FLASH** and then press  key.
- Press  or  key repeatedly to choose among **100ms**, **300ms** and **600ms**, press  key.
- Press  key to valid.
- Press  key to exit.









## 5) Voice Function

This feature allows you to check the number you have dialed in standby mode without looking at the display.

The phone will announce the number that comes in when a new call is received unless the caller blocks the number.








The system will announce the number that stored in phone book or CID list when you are reviewing the list, so the feature allows you to check these numbers when you use  or  key to scroll through the list.

Note that if you have stored a number in the phone book and recorded the corresponding voice name, when an incoming call with this number comes in or reviewing the phone book or CID list, the system will announce the name associated with this number.

- Press  soft key to display the main menu list.
- Press the  or  key repeatedly to move to **VOICE**, press  key.
- Use the  or  key to select **ON / OFF** to activate / deactivate the voice function, press  key to confirm.
- Press  key to exit.





## 6) Language Setting

The phone supports up to 7 predefined languages: English, Espanol, Francaish, Deutsch, Hebrew, Italiano, Nederlands. You can change the language used to display the menu messages and voice function.

- Press  key to display the main menu list.
- Press the  key to move to **LANGUAGE** and then press  key.
- Press  or  key repeatedly to scroll through the options. Each language will be displayed in its own native translation.
- Press  key to select the required language.
- Press  key to exit.

## 7) Playing the outgoing SOS message

This feature allows you to listen the SOS announce which be send at the person register in the SOS number list when you launch a SOS call.

- Press  key to display the main menu list.
- Press the  key to move to **CHECK MESSAGE**.
- Press  key and the SOS announce message is playing.
- Press  key to exit.






## 8) Record the outgoing SOS message

There is a default outgoing alert message recorded on the telephone. You can replace this message with one of your own. After activating an automatic emergency call, the phone numbers assigned as SOS emergency number inside Phone book memory are called automatically. The alert message is played repeatedly until your emergency call is acknowledged by the person receiving it through pressing the “0” key. For this reason, you must end your own alert message clearly telling the receiving party to “...take this emergency call by pressing the 0 key!”.





**Note: When recording your message, make sure that the person called recognizes your name in the emergency call. Inform them clearly that this is an emergency call and that you need help.**

**Note: During Automatic emergency call mode, “+” icon will be displayed.**

# Phone Setting

- Press  key to display the main menu list.
- Press the  key to move to **RECORD MESSAGE**.
- Press and hold  key, after to hear a long beep, leave your SOS message.
- Release the  key to end recording.
- Press  key to exit.

## Deleting the outgoing alert message

- Press  key to display the main menu list.
- Press the  key to move to **CHECK MESSAGE**.
- Press  key and press  during playback. The recorded message will be deleted. Pre recorded Default message will be activated.

## 9) Record an contact in phonebook or SOS list

### a) Phone book

30 phone numbers can be stored in the phone book together with the associated names.


- Always enter the area access code with the phone numbers so that the telephone can also assign incoming local calls to a phone book entry.
- When the memory capacity of the phone book is used up, the message **MEMORY FULL** appears when an attempt is made to store another number. To create space, an existing entry must first be deleted.
- The phone book entries are arranged alphabetically.

### Character Map

To enter a specific alphanumeric character, press the relevant key one or more times for the required character according to the key e.g.: press once for the first character, press twice for the second and so on.







**Note: When entering the same letter twice or a different letter with the same key, wait for a few seconds until the cursor move automatically and then select the next letter.**

Enter a space by pressing “1”.

Delete a character by pressing .









Wait until the cursor skips one place forward. Enter the letter again.

## Creating phone book entries

- Press  key to display the main menu list.
- Press the  key to move to **STORE NUMBER.**  
Press  key, enter the telephone number and press .
- Enter the name and press .
- Select “**No Alert Number**” then press  key.

## Record a voice name to phonebook entrie







A voice name can be recorded for each phone number stored in the phone book. When you subsequently select an entry in the phone book, CID list list or when you receive a call, the recording you made for it is played and you can hear the entry you have selected.

- Press  key to display the main menu list.
- Press the  key to move to **NAME RECORDING** and press  key.
- Press  or  key repeatedly until the desired entry is displayed
- Press and hold  key, after to hear a long beep, leaft your contact name.
- Release the  key to end recording
- Press  key to exit.












**Note: If the key is not released, recording is automatically stopped after 3 seconds.**

# Phone Setting







## Deleting recording from one phonebook contact

- Press  key to display the main menu list.
- Press the  key to move to **NAME RECORDING** and press  key.
- Press  or  key repeatedly until the desired entry is displayed
- Press  during playback to delete the recording.







## Editing entrie in the phone book

- Press  to enter Phone book directory and select an entry using  or .
- Press and hold  key for approx. 3 seconds and confirm **EDIT?** by pressing  key.
- Enter the new telephone number if necessary and confirm with  key. Use  to delete one digit.
- Enter the new name if necessary and confirm with  key.
- Use  to delete one character.
- Select **"No Alert Number"** then press  key, you have the message **"Saved"** to confirm that your phone number is recorded.
- Press  to exit the menu.






## Deleting a single entry from the phone book

- Press  to enter Phone book directory and select an entry using  or .
- Press ,. The display shows **DELETE?**.
- Press  again. The message **DELETE!** Confirm that your contact is deleted.
- To abort the deleting procedure press .

## Delete all entries from the phone book

- Press  to enter Phone book directory and select an entry using  or .
- Press and hold  for approx. 4 s. The display shows **DELETE ALL?**.
- Press  key again. The message **DELETED!** Confirm that your contact is deleted.
- To abort the deleting procedure press .

## Creating memory picture key

- Press  key to display the main menu list.
- Press the  key to move to **STORE NUMBER.** Press  key, enter the telephone number then press .
- Press on one of the 3 memories picture keys, you can see the message **SAVED!** To confirm that the contact is recorded.
- Press  key to exit.

*Note: to change the phone number from one picture memory key, record one new phone number and the old number will be replace automatically.*

## b) SOS Function





The SOS function enables you to ask for help with a one-touch operation when you are in an emergency situation.

**Note: You need to connect the adaptor for the SOS function.**

### To ask for help by one-touch operation

In order for this SOS function to work, you need to preset the SOS numbers and record a message that you would want to tell your chosen helper.

### Record a SOS phone number

- Press  key to display the main menu list.
- Press the  key to move to **STORE NUMBER.** Press  key, enter the telephone number and press .

# Phone Setting

- Enter the name and press **OK**.
- Select “**Alert Number**” then press **OK** key.
- The screen displays LOCATION, enter the number of the location SOS position.

**Note: Set it to “1” if you want the number to be dialed first during SOS Emergency dialing mode.**

**You have no limit for the number of SOS phone number.**

## SOS Emergency Dialing

After setting the SOS number and message, you can use the SOS function.

- Press the SOS Emergency key on the base or on the remote SOS button during 3 seconds. The phone loudspeaker is switched on. An acoustic beep beep beep signal is sounded for 15 sec.
- You can hear the dialling tone and the phone number assigned to emergency number in first position is automatically dialled, in succession, at intervals of approx. 60 seconds.
- The outgoing alert message is played in a continuous cycle.
- If there is no response within 55 seconds or the line is busy, the telephone will dial the next number in turn until all the numbers you set are called. Each number will be dialed for 15 times.
- The person answering the call immediately hears this alert message. The person taking the call stops the outgoing SOS message by pressing “0”. You can then converse for 3 minutes. Handsfree mode remains active on the phone making the emergency call during this time.
- If the receiver doesn’t validate in press the 0 key on his phone when it hears the beeps before the 3 minutes, you have 15 seconds to press the 0 key. If you don’t press the key, the SOS call is stoped.

You can stop the SOS procedure in pressing the SOS remote button on the emergency call unit again or press “**SOS**” key on phone for 3 seconds to stop automatic emergency call mode.

**Note :** For the optimum speakerphone volume in **SOS** mode, leave the speakerphone volume at the high position.

## Battery replacement

















Press shortly the SOS button on the emergency call. The LED lights up. If the LED no longer lights up when the button is pressed and held, replace the battery as below.

- Remove the 2 screws on the rear side of the emergency call unit using a small, crosstip screwdriver.
- Insert the tip of a small screwdriver in the notch (3) and open the housing.
- Replace the battery CR2025. Only use batteries of the same type. Pay attention to correct polarity.
- Close the housing and place the 2 screws.

## Range

Your remote has a 20-30-meter transmission field between the transmitter and the phone when pressed.


## 10) TIME AND DATE SETTING

- Press  key to display the main menu list.
- Press the  key to move to **TIME/DATE.**
- Press  key, enter the correct hour with the keys  or . and press .
- Enter the correct minutes with the keys  or . and press .
- Enter the correct month with the keys  or . and press .
- Enter the correct date with the keys  or . and press .
- Press  key to exit.

**Note: if you have the function CID on your network, at the first call, the date & Hour will be set automatically.**

# TECHNICAL SPECIFICATIONS

## TECHNICAL SPECIFICATIONS

Carrier frequency	: 433 MHz
Receiving amplification	: up to 40 dB
Remote Range	: Up to 20~30 meters (open area)
Remote weight	: 30 grams
Operating voltage	: Telephone base: DC 9V  0.2A, 1.8W : Remote: 3V Li-metal Battery CR2025
Radio Frequency Power	: <20 dbm

# FEATURES

- 30 Emergency dialing from Phone book memory + (two way to activate the Emergency dialing by remote control or SOS Key)
- 30 phone book memory (non volatile memory)
- Loud ringer 90dB
- Slide Tone frequency control
- 40dB Amplification Loudness receiver with Led indicator
- Slide receiver volume control
- Big button dialing keypad
- Big display with LCD back light, Dual FSK/DTMF type I/II CID  
3 Line LCD display
  - 1 st Row: 7 segment for new call, date / time, Repeat / Batt / Clip / phone book icon.
  - 2 nd Row: 14 x 7 segments.
  - 3 rd Row: 16 x Dot Matrix.
- 6 Languages for menu and voice prompt
- Talking caller ID (Name & Number, User recordable)
- Factory pre-recorded voice prompts (0-9, Caller ID, Phone book, Default OGM)
- Non volatile 5 caller ID memory (time/day of call)
- 14 digits number, 16 characters name
- 433 MHz water proof pendant
  - Remote emergency SOS dialing
  - Remote speakerphone answer on & off function
- Real time clock (24 Hrs. display)
- New call indication: LED and icon
- Contrast control
- Up / Down review
- 2-way speaker phone with LED indication
- Flash (100 / 300 / 600 ms)
- Redial / Pause
- Menu
- Ringer indicator (LED Red color)
- Hearing aid receiver (ETS300381 preferred range)

# Troubleshooting

## **No dial tone**

1. Check that all phone cord connections are securely plugged into the telephone & wall jack.
2. Plug another phone into the wall jack to make sure your phone service is working properly.

## **No audible ringer**

1. Make sure the ringer is not set on low position.
2. You may have too many extensions on your line. Try unplugging a few devices.

## **No amplification**

Check to see if the Amplify key is "On". The red light +40 dB should be lit.

## **Noise, Static, Interference while using the handset**

A filter may be required for homes with a DSL line or near Radio towers.

## **Caller ID information does not show**

Make sure you are subscribed to Caller ID through your local company.

# SAFETY INFORMATION

## General

Only use the power supply included with the product.

Do not open the unit. Contact the helpline for all repairs.

## Cleaning

Clean the telephone with a soft cloth. Never use polishes or cleaning agents - they could damage the finish or the electrics inside.

## Environmental

Do not expose to direct sunlight.

Always ensure there is a free flow of air over the surfaces of the telephone.

Do not place any part of your product in water and do not use it in damp or humid conditions e.g. bathrooms.

Do not expose your product to fire or other hazardous conditions.

Unplug your phone from the telephone socket during thunderstorms because it could damage your telephone. Your guarantee does not cover thunderstorm damage.

The telephone is designed for working within a temperature range of 5°C to 45°C.

# GUARANTEE

From the moment your Geemarc CL610 is purchased, Geemarc guarantee it for the period of two years. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our website at [www.geemarc.com](http://www.geemarc.com). The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative. The Geemarc guarantee in no way limits your legal rights.

**IMPORTANT:** YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.

**Please note: The guarantee applies to the United Kingdom only**

**DECLARATION:** Geemarc Telecom SA hereby declares that this Serenities is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/UE.

The telephone does not operate if the line current is lower than 18 mA.

*The declaration of conformity may be consulted at [www.geemarc.com](http://www.geemarc.com).*

**UK  
CA**

**Electrical connection:** The apparatus is designed to operate from a 230V 50Hz supply only. (Classified as 'hazardous voltage' according to EN62368-1 standard). The apparatus does not incorporate an integral power on/off switch. To disconnect the power, either switch off supply at the mains power socket or unplug the AC adaptor. When installing the apparatus, ensure that the mains power socket is readily accessible.

**Telephone connection:** Voltages present on the telecommunication network are classified TNV-3 (Telecommunication Network Voltage) according to the EN62368-1 standard.

# RECYCLING DIRECTIVES

The WEEE (Waste Electrical and Electronic Equipment) has been put in place for the products at the end of their useful life are recycled in the best way.

When this product is finished with, please do not put it in your domestic waste bin.

Please use one of the following disposal options:

- Deposit the product in an appropriate WEEE skip.
- Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

Thus if you respect these instructions you ensure human health and environmental protection.



For product support and help visit our website at  
**[www.geemarc.com](http://www.geemarc.com)**

E-mail : **[help@geemarc.com](mailto:help@geemarc.com)**

Telephone : **01707 387602**

Parc de l'étoile, 2 rue Galilée, 59760 Grande-Synthe, France.

lines are open 09h00 to 16h00 Mon to Fri

This product is made in China To Geemarc Telecom





UGCL610\_En\_V1.0