

Operating manual

BIG EASY 2[®]

convenient
mobile
phone



Made by *fitage* in Germany

Battery warning light
P. 17, P.21

Direct dial keys
P. 51

Emergency group call
P. 57

Scroll forward
Handset louder

Scroll back
Handset quieter

Accept call
P. 41, P.45
Confirm entry

Switch on phone
P. 37
Electronic key lock P. 12

Reverse:
- Handsfree loudspeaker
- Battery compartment

Loudspeaker

Warning light for incoming calls and network reception
P. 40, P. 42

Display P. 13

End call P. 43

Cancel entry

More functions
P. 48 ff

Number keys, letter keys
(P. 153 onwards)

Switch off phone
P. 45

Microphone P.11



Jack for earphones
with microphone
P. 28


Output aperture
for acoustic signals
and ringtones

Jack for charger
P. 21




“BIG EASY 2” Quick Guide



Switching on:

- Press the * key on the bottom left for approx. 2 seconds until the display lights up and the “Please wait” message appears.
- Wait until the phone is ready and the “Service Provider” appears on the screen. (A green light will flash at the top right.)



Switching off:

- Press the # key on the bottom right for approx. 2 seconds until the light comes on (the display will say “Goodbye”). The phone will then switch off.

Making a call by dialing:

- Dial the number.
- Check that the number in the display is correct.
- Press the large green  key briefly to connect the call and put the phone to your ear.
- At the end of the call, press the red  key briefly to disconnect the call.

Making a call using key I, II or III:

- Press one of the keys I, II, or III briefly to display a previously stored contact.
- Press the large green  key briefly to connect to this number and put the phone to your ear.
- At the end of the call, press the red  key briefly to disconnect the call.

Emergency function: Press key I, II or III for approx. 2 secs. and hold it down until the alarm sounds (N.B. You need to activate the Emergency Function first.)

Tips:

- A flashing green light on the top right means the phone is ready for use.
- A flashing red light on the top left plus an audible signal means the battery needs to be recharged urgently. The battery light stays on while the phone is being charged. (Always keep the phone on charge when you are at home – this will not damage the phone.)

1 Introduction

Thank you very much for choosing the BIG EASY 2[®] Mobile Phone.

This mobile phone was developed with one particular aim in mind: to make the basic function of a phone. i.e. making phone calls, a priority and to design it so it's convenient to use. In addition, we have put particular emphasis on its user-friendly qualities and fully accessible design. This mobile phone can also increase your personal safety and provide more health safeguards.

We would especially like to thank all those who have been unceasing over the years in their demands for a phone like the BIG EASY 2[®]. The mobile phone you see before you is the result of your efforts, suggestions and ideas. The process of development, unit design and production was established and remains in Germany.

If you have any suggestions for improvement, we'd be delighted to hear about them.

Dr. Darius Khoschlessan
CEO
fitage GmbH & Co. KG, Mannheim

Operating instructions for	BIG EASY 2 [®]	Item. B2TH
As of 9/2007		Subject to alteration

2 Table of contents

Summary screen of the mobile phone

Quick Guide	1
1 Introduction	2
2 Table of contents	3
3 Safety advice	7
4 Your mobile phone and its parts	10
4.1 Housing	10
4.2 Electronic key lock	12
4.3 Display	13
4.4 Battery and SIM card	16
4.5 Battery.....	17
4.6 Charger	21
4.7 SIM card	23
4.8 Antenna	26
5 Accessories	27

How to get started:

6 Getting started	31
6.1 Charging	31
6.2 Open the battery compartment.....	31
6.3 Open the SIM card compartment.....	33
6.4 Insert the SIM card	33
6.5 Close the battery compartment.....	35
7 How to make a call:	37
7.1 Switching on.....	37

7.2	Entering your PIN number.....	37
7.3	Automatic mobile phone network search.....	39
7.4	Dialling.....	39
7.5	Connecting your call.....	41
7.6	Changing the volume of the handset.....	41
7.7	Handsfree function	43
7.8	Ending a call.....	43
7.9	Switching off.....	45
7.10	Accepting/declining an incoming call.....	45

8	Menu structure - overview.....	47
9	Calling stored phone numbers	51
9.1	Direct dial	51
9.2	Speed dial	51
9.3	Selecting names from the phone book.....	53
9.4	Emergency group call	57
9.5	Using speed dial to call your mailbox.....	59
9.6	Repeat dialling	61
9.7	Calling back number of last caller....	63
9.8	Calling back number of last missed call	65
10	Storing phone numbers in the memory.....	67
10.1	Storing a new entry – name	67
10.2	Storing a new entry - number	69
10.3	Changing an entry	71
10.4	Deleting an entry	73
10.5	Assigning an entry	75
10.6	Deleting assigned numbers	77

11 Settings	79
11.1 Activating vibration.....	79
11.2 Setting the ringtone volume.....	81
11.3 Setting the keypad sound.....	83
11.4 Setting the letter style.....	85
11.5 Setting the date and time	87
11.6 More settings	89
11.6.1 Selecting a language	91
11.6.2 Setting the ringtone	93
11.6.3 Activating emergency group call	95
11.6.4 Activating the SMS function	97
11.6.5 Entering your own phone number.....	99
11.6.6 Entering your mailbox number	101
11.6.7 Changing the letter size	103
11.6.8 Changing the size of the time display	105
11.6.9 Automatic key lock	107
11.6.10 Switching off the PIN query function ...	109
11.6.11 Selecting a network (abroad/borders)	111
11.6.12 Automatic call acceptance	113
12 Alarm	115
13 Menu structure for SMS - overview	117
13.1 Message received display	119
13.2 Creating a text message = SMS	121
13.3 Sending a text message = SMS.....	123
13.4 Saving a text message = SMS	125
13.5 Calling up received/stored text messages	127
13.5.1 Read received/stored SMS	129
13.5.2 Change received/stored SMS	131
13.5.3 Delete received/stored SMS	133
13.6 Emergency call text	135

14 Other functions and instructions	137
14.1 SOS functions.....	137
14.2 Using the phone without a SIM card.....	137
14.3 No network reception	137
14.4 Location finding	138
14.5 Entering PIN incorrectly 3 times	138
14.6 Changing your PIN	138
14.7 Torch function	138
14.8 Saving phone book onto/from SIM card.	139
14.9 Call divert/forward programming	139
14.10 Restoring the factory settings	139
14.11 Calling up credit on top-up card	139
14.12 Special display messages	140
15 Trouble-shooting	141
GSM codes for mobile phones	144
16 Standard documentation	145
17 Technical data	145
18 Disposing of this product	146
19 Terms of warranty	147
20 Glossary	149
21 Index	150
Quick guide to function keys	153 – 156
Warranty certificate	inside back cover
Service advice	back cover

3 Safety advice

Please read this safety advice before reading the operating instructions or using the phone

Danger



Medical aids such as hearing aids or heart pacemakers may be affected by electromagnetic waves from the mobile phone and may malfunction as a result. You are therefore advised to keep a minimum distance of 15-20 cm between these devices and the mobile phone and not to hold the phone directly to the ear if you are wearing a hearing aid. Do not carry the mobile phone in your shirt pocket if you are fitted with a pacemaker. Contact your GP for further information.

Warning



Do not hold the mobile phone to your ear while the ringtone is still sounding or when the “hands free” option is activated. If these sounds are delivered close to the ear, they can cause serious long-term hearing damage. Under no circumstances should the mobile phone be held close to the ear when the “hands free” option is activated or while it is ringing.

Warning



Observe the legislation and local regulations when using your mobile phone. These may vary from country to country, for example on board aircraft, at petrol filling stations, in hospitals and while driving.

Warning



There is a risk of explosion if the battery is not replaced correctly or if it is exposed to a naked flame. Do not attempt to open the battery. Only use a charger and battery which is supplied or approved by the manufacturer. When replacing the battery, ensure that it fits properly and is inserted the right way round. It is designed so that it cannot be inserted the wrong way round without using force.

Warning



The SIM card can be removed. It is possible for small children to swallow it, so keep your mobile phone **out of the reach of children at all times**.

Please note:



Your mobile phone should only be used for the purpose for which it is intended and only in places where its use is permitted. Do not expose it to moisture, intense heat or cold and protect it from impact. Unauthorised use of this mobile phone may damage it and invalidate the warranty. Do not attempt to open your phone, except to replace the battery or SIM card. Any other modifications to the phone are not

permitted and will result in the loss of your user authorisation.

Please note:



This mobile phone may interfere with television sets, radios and electronic devices when placed in close proximity.

Advice



Please note that the internal antenna is fitted along the base of the mobile phone housing. This **reduces radiation exposure** to the head compared to phones where the antenna is fitted at the top. In addition, as the antenna is built into the base of the housing, you should - as far as possible - experience less interference when using the phone with most types of **hearing aid**.

Nevertheless, your mobile phone may cause interference with certain hearing aids in spite of these special features. If you experience interference, you are advised to contact the manufacturer of your hearing aid to enquire about alternative solutions.

Make sure you do not cover the lower end of the device with your hand when you are using it. If your hand covers the **antenna reception area**, the phone will have to operate at higher than normal transmission levels, which will reduce the length and quality of its performance. It will also affect the quality of your connection.

However, there is no scientific evidence that covering up the antenna reception area with the hand will result in health problems.

4 Your mobile phone and its parts

Please read these operating instructions carefully and keep them in a safe place. No liability is accepted for losses caused by inadequate attention being paid to these instructions or where the advice contained therein is not followed.

If technical questions or defects arise, please refer at all times to the service advice provided at the end of this booklet.

4.1 Housing

The housing of your mobile phone is manufactured from high-quality ABS plastic with a paint finish.

- To enjoy a long and problem-free service life, please protect your mobile phone **against extreme temperatures** (below -10°C and above $+55^{\circ}\text{C}$). Protect the paint finish by not allowing the phone to come into contact with rough surfaces and strong abrasive or cleaning agents.
- The housing is **not waterproof!** Should the equipment come into contact with water, dry the outside of it at once. Disconnect the phone immediately if it is connected to the power supply. Open the battery compartment and remove the battery fully by removing the connection leads. Stand the mobile

phone upright where there is good ventilation. Do not expose the phone to any kind of heat. Do NOT open the housing! Should the unit still show any traces of moisture after drying, or should there be a malfunction after the battery is re-inserted, please contact your mobile phone dealer.

- Please ensure that **no dirt or sand enters the openings** on the phone (i.e. buzzer signal outlet, sockets for headphones and battery charger, microphone and loudspeaker outlets)
- Please **clean** the outside of your phone with a soft damp cloth.
- Do not drop, knock or shake the phone. **Rough handling** can damage the internal parts. Damage caused in this way is not covered by the warranty.

4.2 Electronic key lock

To prevent the keypad from being accidentally pressed, you can activate the **electronic key lock**, which locks all the keys except for the emergency call function on the I, II and III keys.

You activate or deactivate the electronic key lock by



pressing the key for 3 seconds.

When the key lock is activated, you will see the following message on the top line of the display:



Incoming calls can still be taken using the call acceptance key. The lock is released for the duration of the call and is automatically reinstated again afterwards. The emergency call function is also available at all times.




When the key lock is activated, you can use the key to illuminate the display so that you can see the time in the dark.

You also have the option of activating the key lock automatically (when this has been deactivated by a call, for example) after approx. 60 seconds, provided you do not make a call or press any of the keys. The procedure for setting up this function is described in chapter 11.6.9 (page 107).

4.3 Display

When the mobile phone is ready for use, the display is divided into the following areas:

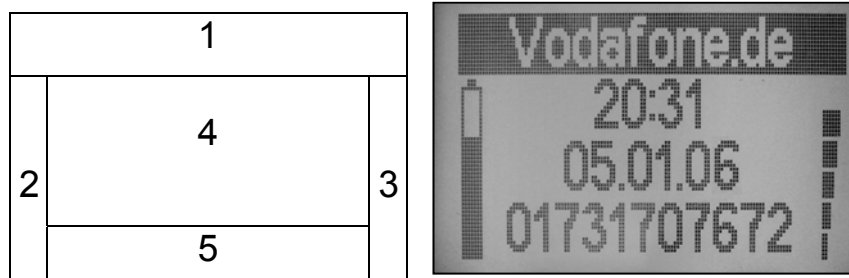

1. **Headline:** The network service provider you are currently using will be displayed here. On activation or if required, the symbols and/or texts (e.g. Connecting) and information on settings (e.g. Alarm on) in the display are reversed (i.e. displayed the other way round).
2. **Battery charge level:** Indicates the level of battery power in the form of a battery symbol which shows the level of charge in six different stages.
3. **GSM mobile phone network signal strength:** The strength of reception is indicated here - from no bar (minimum) to six bars (maximum) - one above the other. Where no signal corresponding to your SIM card is available, no bar will be displayed.
4. **Display:** Shows the time and the call number or the name entered for an incoming call.
5. **Information line:** Shows your own number (if entered) or other information.



When the **selection menu** is on the screen, the **menu options** are displayed in the following areas:

1
2
3
4

Menu	

1	Phone book
2	Settings

1. **Header:** This line mostly contains the name of the area of use (category) which is to be selected or changed.
2. The function **prior** to the one currently selected
3. The function **currently selected**
4. The function **after** the one currently selected

Select the function you would like using the  or  keys.

A line with this symbol:

----- (= end of list symbol)

indicates that you have seen all the functions available and the display shows the first function again.


In these instructions, the text simply represents the actual information which appears in the display *in italics*, e.g. *Time* replaces **12:45**.

4.4 Battery and SIM card compartment

1. On the rear of the phone is a cover, under which you will find the battery and the SIM card.

The cover closes with a catch to prevent it from opening accidentally.

2. Push the cover to the right – it should slide across approx. 5 mm. Now remove the cover.
3. You can now slide the cover to the right approx. 5mm and remove.
4. When replacing the cover, turn it so that the **symbol on the rear of the cover points to the right**. Place the cover on the housing approx. 5 mm to the right and then slide it to the left. The safety catch will engage automatically.

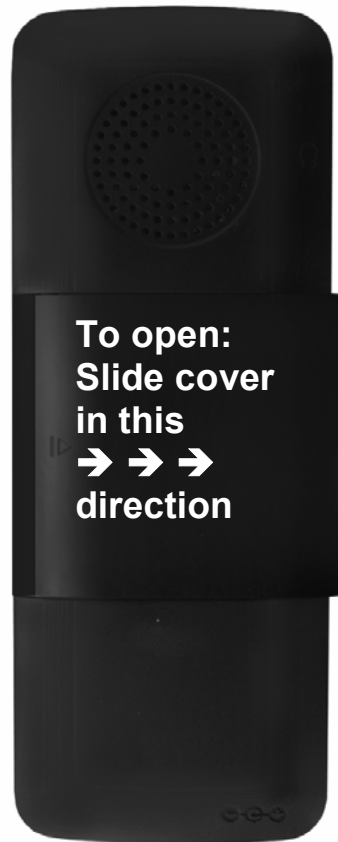

After opening the cover ...

... you will see the battery, which you can easily remove and place to the right hand side with the connection leads still attached.



The SIM card is mounted under the battery compartment.



4.5 Battery

Your phone is fitted with a top quality rechargeable battery. Before a new battery is used for the first time, it must be charged up for at least 4 hours.

On the left hand side of the display panel you will see an elongated battery symbol. The more dark bars are shown in the display, the higher the charge level of the battery. When the battery is fully charged, the phone can remain switched on and ready for use (i.e. on standby) for up to approx. 120 hours (approx. 5 days) or in use for up to 5 hours of continuous conversation. When the battery has a charge of around 10% (i.e. the equivalent of 8-12 hours on standby only) before it is fully discharged, a red battery light will start to flash on the top left above the display. At the same time, an acoustic signal will sound approx. every quarter of an hour to remind you that the mobile needs to be connected up to the charger in the near future. The message “**Charging**” will then appear at the top of the display.

To charge the mobile phone battery, insert the plug on the charger into the jack on the left hand side of the bottom of the mobile phone. Do not switch the mobile phone off while it is charging. **You can still receive and make phone calls while the phone is charging.** While the phone is charging, the text “**Charging**” appears on the display. The bars on the battery symbol on the left of the display flash in sequence to represent the charging process.

When the battery is fully charged (approx. 3½ to 4 hours for a fully discharged battery), the text “**Charged**” will appear.

Remove the charger from the phone. All the bars in the battery symbol on the left of the display will be filled in.

The battery will feel warm while charging – this is absolutely normal and is not a cause for concern.

Full performance of a new battery is achieved only after several charge and discharge cycles.

When the battery is fully discharged, a text will appear in the display when charging begins and the battery symbol will only start to flash after approx. 3 minutes.

Remaining charge indicator:

Your mobile phone can advise you of the precise charge level of the battery. However, no phone can tell you how many calls you can still make with the remaining charge. That’s why your mobile has no indicator to show the **absolute remaining operating time**. It might seem to the user that the device is only in ready-to-use (i.e. standby) mode, but the power requirement can differ greatly: if the mobile is in the car or indoors, it will need much more power to maintain the network connection than when it is near to a transmission mast. When conversations are held at a higher volume and in an area with poor reception, more power will be

required than in favourable conditions and with the volume turned down.

For this reason the battery symbol indicator shows the **charge remaining as a percentage of the full charge level** and not the remaining operating time.

Battery care:

Your mobile contains sophisticated technology and a top quality battery and so does not require you to take specific care of the battery while you use it (there is no memory effect leading to loss of capacity). You can recharge the device even after just a short period of use. Equally, you can use the device until the battery is fully discharged and the mobile switches itself off automatically. The electronic safety features ensure that a total discharge, which would damage the battery, is not possible. Recharge a fully discharged battery for at least 15 minutes before making any further calls, so that your next call will not be interrupted.

Please note that the battery is a consumable component of the mobile phone and is not covered by the warranty. Even the capacity of a top quality battery, such as the one used here, will of course diminish in time.

Storing the battery in excessively hot or cold temperatures will also gradually reduce the capacity.

Noticeably shorter times for conversation and when ready to use (i.e. on standby) will become apparent after approx. 1 – 2 years, depending on the extent to which the phone is used. In this case, we recommend that the battery is replaced. You do not have to be an expert in order to replace the battery. You simply have to carefully remove the battery connection leads from the mounting and re-attach them to the new battery's terminals in the same way (i.e. red lead on top and black lead underneath).

If you do not use your mobile phone for longer periods (i.e. several weeks), loosen the connection leads and remove the previously fully charged battery from the housing. To use the phone again, re-connect the battery (see above).

After removing the battery or when long-term total discharge has occurred, you will need to reset the time and date.



When replacing a battery, do not dispose of it in your household waste. Please hand the battery in for disposal at the retailer where you bought the replacement battery or take the battery to your local waste and recycling centre. We are of course also happy to receive batteries returned to us for disposal free of charge.

Warning



There is a risk of explosion if the battery is not properly replaced or is exposed to a naked flame. The battery must not be opened. Only use suitable original chargers and batteries. Take care when replacing the battery to attach the connection leads properly and the correct way round. Turn the connection leads so that the two red wires on the connector point up and the two black ones point down. The type of connection is designed in such a way that it cannot be inserted the wrong way round without using force.

4.6 Charger

Your mobile phone is specifically intended to be used with the charger supplied. The charger connection is polarized for compatibility.

Warning




Do not allow the phone to come into contact with moisture and use the charger in dry conditions only. It is designed to be operated using a power supply of 220V~ only. Use original chargers only.

The use of other chargers may damage the phone and invalidate the warranty.

Insert the plug on the charger lead vertically into the jack on the bottom of the phone on the left hand side, as illustrated below, and push it all the way in.

Charger jack

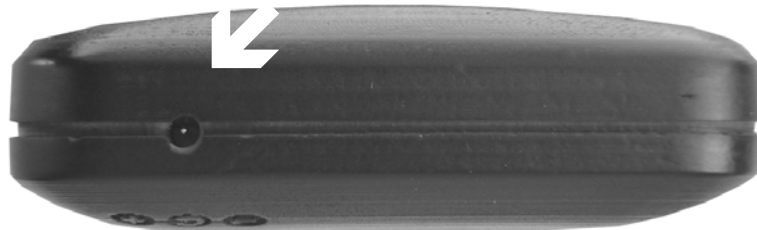

When the connection has made contact, the message “**Battery charging**” will appear in the display of the mobile phone.

As long as the mobile is connected to the charger, the red battery symbol will show on the top left of the display.

When the battery is totally discharged, the text appears at the start of the charging process in the display and the battery symbol flashes only after approx. 3 minutes.

4.7 SIM card

To be able to make calls with your phone, you need a small electronic memory card called a SIM card.



(Size as illustrated)

It receives and saves all the information required to operate the phone:

- Security codes such as your PIN number (Personal Identification Number)
- Phone book
- Text messages
- Information on special services

How do I obtain a SIM card?

Your mobile phone is normally supplied without a SIM card. Please contact your mobile phone dealer or a network operator and/or service provider. You will be able to take out a service contract with them. There are a number of different types of contract which might be useful for you depending on your usage (i.e. the type, duration and frequency of your phone use):

- Post-paid (usually with monthly fees and statements)

- Top-up cards, with pre-paid units. When the units have all been used up, the card must be “topped up” with credit (e.g. for € 15 or € 25).
- Service contracts with a simplified charging structure. Various store chains, discount businesses and other companies offer these types of contract.

Your mobile phone is suitable for any type of contract and can be used without restriction with SIM cards from all mobile phone network operators and/or service providers throughout Europe (in some EU countries you will need a card from a local supplier). It can also be used worldwide for other mobile phone networks (in Asia and America), although the phone is not ideally designed for these networks.

You can of course use your mobile phone with a SIM card from an ongoing contract or from an existing phone.

When the phone is not fitted with a SIM card, it is only possible to call the 112 emergency number. Please see page 137.


Handle and look after your SIM card with great care in order to avoid damaging it. If your SIM card is lost, stolen or damaged, please contact the network operator and/or service provider you obtained it from as soon as possible.

Inserting the SIM card

The SIM card is inserted underneath the phone battery.

Make sure that the phone is switched off and that it is not connected to the charger. Turn the phone over and remove the cover of the battery compartment, as previously described, and lift the battery to one side. Leave the battery attached to the connection leads.


Using your fingernail, slide the SIM card holder on the black grip to the right until it lifts up.

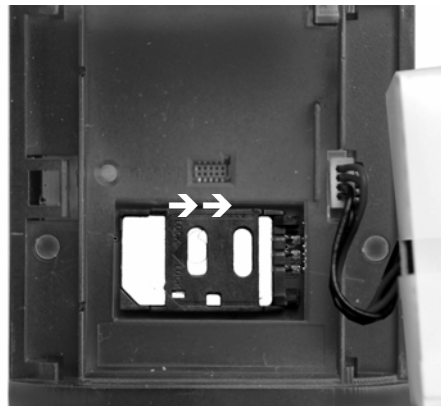

Insert the SIM card into the raised card holder so that the **gold-coloured contacts on the SIM card face downwards** towards the phone and the **“cut-off” corner** of the SIM card is at the **bottom left hand side**.



Lower the card holder, **pressing it gently down at the same time**, and slide the grip to the left until you feel it resist and lock into place.

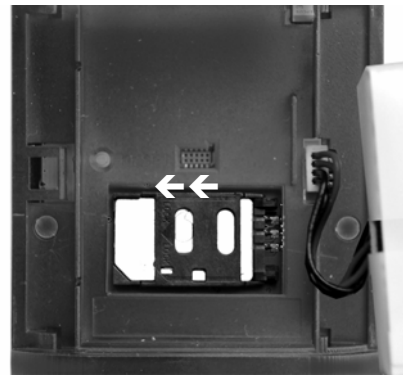

Then insert the battery once again into its original position. If necessary, press the connection leads on the battery back into their guide slots. Finally, close the cover of the battery compartment.

4.8 Antenna


Your mobile phone has a built-in antenna. This is located internally across the base of the device. The advantage of this position is that antenna radiation is reduced in the immediate area of the head, thus also minimising interference with hearing aids, for example. To avoid any negative effect to the reception and transmission qualities of the antenna, you should not cover or shield the lower part of the phone with metallic objects (e.g. metal stands, gloves coated with metal, or by setting it down upright on a metal plate).

5 Accessories

Included in delivery:

Art. no. 20A1
Li Ion Battery 1100 mAh

High performance original battery

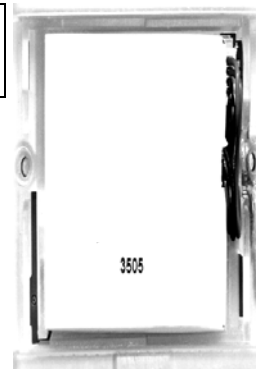

Available separately:

Your supplier or any specialist dealer will be happy to provide more detailed information on these dedicated accessories.

Art. no. 20B1 **Charging stand**

This charging stand provides a practical and attractive means of storing your mobile phone safely and immediately to hand while charging. The charging stand is supplied without a mains charger – the mains charger supplied with the mobile phone simply plugs into the back of the stand.



Art. no. 10K1 **Headphones with microphone**

The headphones plus microphone set is just the right accessory for safely making calls, for example in the car, so that you don't have to hold the mobile phone directly to your ear or for making calls "handsfree" without using the loudspeaker. (Comprises a 1.2m (approx.) lead with a built-in, highly sensitive microphone and top quality earphones.)



Art. no. 10E1 **Inductive headphones**

Although this mobile performs superbly for wearers of hearing aids (i.e. minor interference only), some hearing-aid wearers find it more comfortable to use an inductive handsfree set. The handsfree set establishes a connection between the induction loop receiver on the hearing aid and the mobile phone which is not acoustic and is easy to operate. Put the hearing aid into the T position and it's ready to transmit. For more detailed information about our inductive headphones, please visit our website at www.big-easy.eu and click on "Accessories".



Art. no. 20H1 **Mobile cases**

This case has been developed specifically for this mobile phone to keep the phone safe and well-protected. The case can be worn on a belt or around the neck attached to a lanyard.

You will be able to make calls, select numbers from the mobile phone book and use the emergency call functions with the mobile still in the case.



Art. no. 10Z1 In-car charge lead

The in-car charge lead provides a direct power supply for the charging of batteries – plugs into the 12V cigarette lighter.




Art. no. 10G1 In-car mount




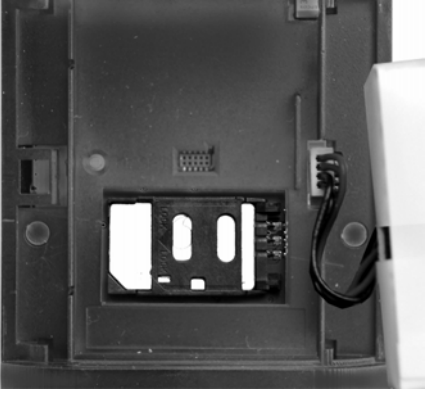
This mount has an extremely robust suction attachment with a vacuum clip to secure your mobile phone to the windscreen or dashboard for use in the car (adhesive mount supplied with goods). It will always hold your phone securely even on bends or when braking. The flexible swan's neck design allows the phone to be adjusted to the perfect angle for reading. The side clamps are padded to protect your mobile and to prevent noise while travelling. You can of course still use the in-car charge lead with the mount.




Getting started

Procedure	What to do
6.1 Charging	Connect the mains charger to the 220 V~ mains supply. Plug the charger lead into the bottom of the phone on the left hand side and push it all the way in. When charging for the first time, charge for 4 hours (or for at least 15 minutes thereafter).
6.2 Opening the cover of the battery compartment to insert the SIM card	<ol style="list-style-type: none">1. Position the device in front of you with the front facing down.2. The cover of the battery compartment is located on the back of the phone.3. Slide the cover approx. 5 mm to the right.  The diagram shows the back of a black mobile phone. A rectangular cover is partially slid to the right, revealing a circular opening. Below the cover, there is a white rectangular box containing the text "Slide the cover in this" followed by three right-pointing arrows and the word "direction" below them. <p>Slide the cover in this → → → direction</p>

Getting started


Display	Outcome / Tips
<p>Battery symbol on the top left on the housing stays on red.</p> <p>Battery symbol on left of display flashes.</p> <div data-bbox="343 432 678 622" style="border: 1px solid black; padding: 5px; margin: 10px 0;">  Battery charging </div> <p>When the battery is fully discharged, the display only appears after 2 minutes.</p>	<p><u>After approx. 3 hours:</u></p> <p>Battery symbol on the top left shows red while phone is connected to the power supply.</p> <p>All bars shown on battery symbol on left of display panel.</p> <div data-bbox="769 465 1104 656" style="border: 1px solid black; padding: 5px; margin: 10px 0;">  Battery charged </div> <p>Disconnect the mobile from the charger to use the phone.</p>
<p>Battery is visible.</p> <div data-bbox="363 963 710 1406" style="border: 1px solid black; padding: 5px; margin: 10px 0;">  </div>	<p>Put the battery to the right hand side with the leads attached.</p> <p>You will see the SIM card holder underneath.</p> <div data-bbox="810 1030 1236 1422" style="border: 1px solid black; padding: 5px; margin: 10px 0;">  </div>

Getting started

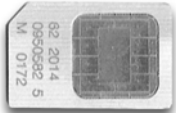
Procedure	What to do
6.3 Opening the SIM card holder	Open the device's SIM card holder by pushing the holder on the black grip firmly to the right using your fingernail. You will then be able to lift up the holder.
6.4 Inserting the SIM card	<p>You SIM card will look like this:</p>  <p>On purchasing a new SIM card, it must first be removed very carefully from the credit card-sized packaging.</p> <p>Position the SIM card so that the <u>gold-coloured contacts</u> are facing the phone. Push the card into the raised holder grip so that the <u>“cut-off” corner</u> of the card <u>protrudes on the bottom left hand side</u>. Then press the card holder back down.</p>

Getting started

Display

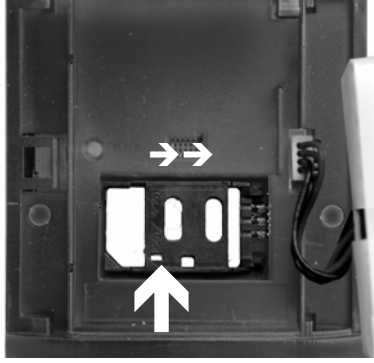

Outcome / Tips

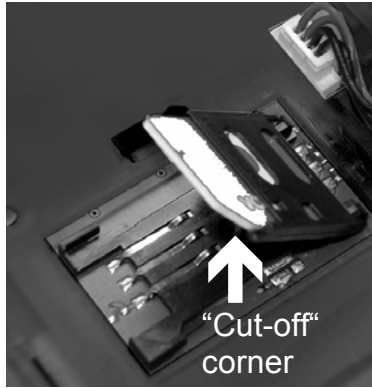

You can obtain a SIM card from your mobile phone network operator, if you do not already have one from an existing phone.








Getting started

Procedure	What to do
<p>6.4 Inserting the SIM card continued</p>	<p><u>Press down the holder, now containing the card, while at the same time</u> sliding the black grip on the holder with your fingernail firmly to the left until you feel it lock into place.</p> <p>.</p> <p>Put the battery back into the recess.</p>
<p>6.5 Closing the battery compartment cover</p>	<p>Place the battery compartment cover on the back of the phone <u>slightly off-set to right</u>. Ensure that the symbol on the cover is on the left hand side of the cover.</p> <p>Slide the cover to the left until it locks into place.</p>




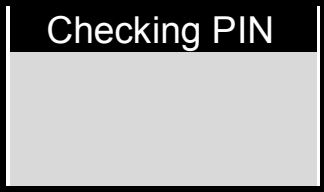
Getting started

Display	Outcome / Tips
	<p>The SIM card is now inserted.</p> <p>The battery is in place in its compartment.</p>
 <p>Close the cover by sliding it ←←← in this direction</p>	<p>The phone is now ready to switch on and make calls.</p>



7 How to make a call

How to make a call	
Procedure	What to do
7.1 Switching on	<p>Press down the key with the green circle (bottom left)</p>  <p>for three seconds</p> <p>Note: If you switch your mobile on using a key other than that mentioned above, the keys and display will light up (for use as a torch), but no text will appear in the display. Use the key on the bottom left hand side with the green circle.</p>
7.2 Entering the PIN number	<p><u>IMPORTANT: Enter the PIN number which belongs to your SIM card and NOT THE NUMBER GIVEN IN OUR EXAMPLE BELOW!</u></p> <p>IMPORTANT: This phone only accepts 4, 5 or 6-digit PIN numbers.</p> <p>e.g.     </p> <p>Enter your PIN number and confirm by pressing the big green key. If you enter an incorrect number <u>before</u> confirming, delete the incorrect number with the red  key.</p>

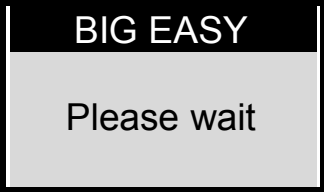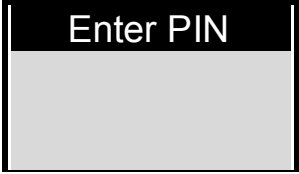
How to make a call

Display	Outcome / Tips
<p>Keyboard and display light up.</p>  <p>A rectangular display box with a black header containing the text 'BIG EASY' in white. Below the header, the text 'Please wait' is displayed in black on a light gray background.</p>	<p>Phone is switched on. You will now be asked for your PIN number.</p>  <p>A rectangular display box with a black header containing the text 'Enter PIN' in white. Below the header is a light gray area for text input.</p> <p>You will have received your PIN number – generally 4 digits –with your SIM card in a sealed letter from your network provider.</p>
<p>Each number appears clearly in the display for you to check.</p>  <p>A rectangular display box with a black header containing the text 'Enter PIN' in white. Below the header, the number '1 3 8 2' is displayed in black on a light gray background.</p>  <p>A rectangular display box with a black header containing the text 'Checking PIN' in white. Below the header is a light gray area for text input.</p>	<p>Checking PIN (If the PIN number is entered incorrectly three times, see page 138.)</p> <p>You only need to enter your PIN number when the PIN Query function is activated – see page 109</p>




How to make a call

Procedure	What to do
7.3 Automatic mobile phone network search	<p>The phone automatically attempts to connect to your mobile phone network.</p> <p>Depending on the strength of network reception, up to six bars of increasing size will appear on the right hand edge of the display as an indicator of the signal strength. (6= maximum reception, 0= no reception)</p> 
7.4 Dialling using the keypad	<p>Enter the phone number you are calling using the number keys</p> 

How to make a call

Display	Outcome / Tips
<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center;">Network search</p> <p style="text-align: center;"><i>Time</i></p> <p style="text-align: center;"><i>Date</i></p> <p style="text-align: center;"><i>Phone number</i></p> </div> <p>The time, date and your phone number may still need to be entered (see page 87).</p>	<p>When the phone locates the network compatible with your SIM card, the handset symbol on the top right on the housing will flash green and your network provider will be displayed at the top of the display.</p> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center;">Your provider</p> <p style="text-align: center;"><i>Time</i></p> <p style="text-align: center;"><i>Date</i></p> <p style="text-align: center;"><i>Phone number</i></p> </div> <div style="border: 1px solid black; padding: 5px;"> <p>For some network providers, the name of the network only is displayed.</p> </div>
<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center;">030611375_</p> <p style="text-align: center; font-size: 2em;">11375</p> </div> <div style="border: 1px solid black; padding: 5px;"> <p>The display panel can also be configured so that all numbers are of the size displayed on the top line. See page 103.</p> </div>	<p>All the numbers entered appear in the inverted headline of the display. The last five numbers are displayed in the main field of the display area in large text.</p> <p>If you enter an incorrect number, you can delete this using the red  key.</p>







How to make a call

Procedure	What to do
7.5 Connecting your call	<p>Press the green  key.</p> <div data-bbox="624 430 1235 600" style="border: 1px solid black; padding: 5px;"><p>Note: When using a new SIM card and/or top-up card, your first call is sometimes automatically forwarded to the network provider's free advice service.</p></div>
7.6 Changing the volume of the handset	<p>During the call, you can set the handset volume to your own requirements using the</p> <p> and  keys – 4 levels from very low to very high are available.</p> <p>(If the volume does not seem to be high enough, you can try to add the handsfree function carefully. See page 43)</p>


How to make a call

Display	Outcome / Tips
<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center;">Connecting</p> <p style="text-align: center;"><i>Name</i> 030611375</p> </div> <div style="border: 1px solid black; padding: 5px;"> <p>Note: If the number you have dialled is engaged, the message “busy” will be displayed for approx. 10 seconds.</p> </div>	<p>As soon as a connection is made, the handset symbol on the top right on the housing will stay green, you will hear the call being connected and the call duration will be displayed.</p> <div style="border: 1px solid black; padding: 5px; margin-left: auto; margin-right: auto;"> <p style="text-align: center;"><i>Name</i> 030611375 <i>Call duration</i></p> </div>
<p>The handset volume is displayed for a few seconds at the start of the call.</p> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center;">Connection</p> <p style="text-align: center;"><i>Name</i> 030611375 Volume: 3</p> </div> <div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Connection</p> <p style="text-align: center;"><i>Name</i> 030611375 <i>Call duration</i></p> </div>	<p>The volume level at which the handset was previously set will stay the same until the next time it is changed.</p> <p>You can only change the setting <u>during a call</u>.</p>




How to make a call

Procedure	What to do
<p data-bbox="316 232 504 353">7.7 Handsfree function</p>  <p data-bbox="320 562 501 607">Warning</p> <p data-bbox="320 613 574 1167">Under no circumstances should the backside of mobile phone be held close to the ear when the “hands free” option is activated or while it is ringing. This can cause hearing damage.</p>	<p data-bbox="603 232 1198 271">To switch the handsfree function on</p>  <p data-bbox="603 376 1102 483"><u>during</u> a call, press the green key 2x.</p> <p data-bbox="603 539 1251 824">While the handsfree function is on, you can set the loudspeaker volume to your requirements using the  and  keys - 4 levels from very low to very high are available.</p> <p data-bbox="603 875 1198 913">To switch the handsfree function off</p>  <p data-bbox="603 1016 1142 1124">during a call, press on the green key 1x.</p>
<p data-bbox="316 1267 552 1350">7.8 Ending a call</p>	<p data-bbox="603 1308 1015 1350">Press the red  key.</p>

How to make a call

Display	Outcome / Tips
<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center;">Connection</p> <p style="text-align: center;"><i>Name</i></p> <p style="text-align: center;">030611375</p> <p style="text-align: center;">Volume: 3</p> </div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center;">Handsfree on?</p> <p style="text-align: center;"><i>Call duration</i></p> </div> <div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Connection</p> <p style="text-align: center;"><i>Name</i></p> <p style="text-align: center;">030611375</p> <p style="text-align: center;">Volume: 3</p> </div>	<p>To prevent this function from being accidentally activated and exposing your hearing to a high volume, this function needs to be confirmed twice and an acoustic signal sounds.</p> <p>The call can also be switched off handsfree by pressing the red  key.</p> <div style="border: 1px solid gray; padding: 5px; margin-top: 10px;"> <p>Note: It is possible, if you use the handsfree function on a very high volume and in a bad and unusual network receipt situation, background noises will be heard. Please reduce the volume level in these cases.</p> </div>
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Your provider</p> <p style="text-align: center;"><i>Time</i></p> <p style="text-align: center;"><i>Date</i></p> <p style="text-align: center;"><i>Phone number</i></p> </div>	<p>This ends the call.</p>

How to make a call


Procedure	What to do
7.9 Switching off	1. Press the key with the red circle (bottom right)  # for three seconds.
7.10 Accepting an incoming call	You will hear the phone ringing and the keys and warning lights on the phone will light up and flash. To accept the call, press the green  key.
Declining an incoming call	To decline an incoming call without answering, press the red  key.

How to make a call

Display	Outcome / Tips
<p>Keypad and display light up</p> <div data-bbox="384 344 708 533" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <div style="background-color: black; color: white; text-align: center; padding: 2px;">BIG EASY</div> <div style="text-align: center; padding: 10px 0;">Goodbye</div> </div>	<p>The phone switches off after approx. 5 seconds.</p> <div data-bbox="767 344 1265 562" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>If you wish to leave the phone switched off for several weeks, please remove the battery by disconnecting the connection leads. See page 20</p> </div>
<div data-bbox="389 842 715 1032" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <div style="background-color: black; color: white; text-align: center; padding: 2px;">Connecting</div> <div style="text-align: center; padding: 5px 0;"><i>Name</i> 030611375</div> </div> <div data-bbox="389 1055 715 1240" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <div style="text-align: center; padding: 5px 0;"><i>Name</i> 030611375 <i>Call duration</i></div> </div>	<p>As soon as the connection is made, the handset symbol on the top right on the housing stays green and the call duration is displayed.</p>
	<p>This function is useful when you are unable or prefer not to take a call.</p>

8 Menu structure

The menu on your mobile phone is structured in a very simple manner.

By pressing the  key, you can obtain the **four basic functions** for the **Level 1** menu:

- Phone book
- Settings
- Alarm
- SMS

You have the option of refining or resetting these functions.

We describe these setting options as

- **Level 2** functions



Where these functions have further setting options, these are described as

- **Level 3** functions



Functions from Level 3 onwards are usually only required by users who wish to use all the functions available or who would like to engage further settings in addition (e.g. emergency call functions, switching off the Enter PIN function, etc.).

Menu structure

Simplified illustration for using the basic functions

	Level 1	Level 2
Menu 	Phone book (p. 67 ff)	New entry (p. 67 ff)
		Entries A-Z (p. 53, p. 71)
	Settings (p. 80)	Vibration (p. 80)
		Ringtone volume (p. 82)
		Keypad sound (p. 84)
		Letter style (p. 85)
		Date Time (p. 87)
		More (p. 89 ff)
		Alarm
SMS	Set alarm / off (p. 115)	
	See Chapter 13 (p. 117ff)	
	Call list	Missed (p. 65)
		Last number (p. 61)
		Received (p. 63)

Menu structure - Overview








	Level 1	Level 2	
Menu 	Phone book (p. 67 ff)	New entry (p. 67 ff)	
		Entries A-Z (p. 53, p. 71)	
	Settings (p. 80)	Vibration (p. 67 ff)	
		Ringtone vol. (p. 82)	
		Keypad sound (p. 84)	
		Letter style (p. 85)	
		Date/Time (p. 87)	
		More (p. 89 ff)	
	Alarm (p. 111)	Set alarm / off	
	SMS (=text messaging) must be switched on (see p. 97)	See relevant chapter for functions (p. 117 ff)	
	Call list	Missed (p. 65)	
		Last number (p. 61)	
		Received (p. 63)	

Menu structure - Overview

Level 3	Level 4
Name/Phone number (p. 67 ff)	
Call (p. 67 ff)	
Change (p. 71)	
Delete (p. 73)	
Assign number (p. 75)	Keys I, II, III
	Speed dial 2-9
	Group call 1, 2, 3
Delete assign (p. 77)	Keys I, II, III
	Speed dial 2-9
	Group call 1, 2, 3
On / Off	
Off / Low / Normal / High	
On / Off	
Black on white/White on black/High contrast	
15:04 31.12.07	Set
Language (p. 91)	German, Eng., Fr.
Ringtone (p. 93)	Tune 1, 2 or 3
Emerg. gp. call (p. 95)	On / Off
SMS function (p. 97)	On / Off
Own number (p. 99)	Set
Mailbox (p. 101)	Set
Letter size (p. 103)	Small / Large
Time (p. 105)	Small / Large
Auto key lock (p. 107)	On / Off
PIN query (p. 105)	On / Off
Select network (p. 111)	Set / Automatic
Auto answer (p. 113)	On / Off





9 Calling stored phone numbers

Your mobile phone provides various options for saving phone numbers for your convenience:





Procedure	What to do
<p>9.1 Direct dial</p> <p>This function can only be used when phone numbers have been assigned to the direct dial keys. See page 75</p>	<p>Press the  or  or  key. The name and phone number of the person you have stored for this key is shown in the display.</p> <p>If you now press the green  key, a call will be made to this person.</p>
<p>9.2 Speed dial</p> <p>This function can only be used when phone numbers have been assigned to the speed dial keys. See page 75</p>	<p>Press key  or  ... up to  and hold for two seconds. The name and phone number of the person you have stored for this key is shown in the display and the call <u>will be connected immediately</u> to this contact.</p>



NOTE: On switching on your mobile phone, you may have to wait approx. one minute before making a call, depending on the number of entries in your phone book. The message “**SIM not ready. Please wait.**” will be displayed during this time.





Display	Outcome / Tips
<div data-bbox="389 432 715 622" style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center;">Dial ? <i>Name</i> 030611375</p> </div> <div data-bbox="389 663 715 853" style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Connecting <i>Name</i> 030611375</p> </div>	<p>As soon as a connection has been made, you will hear the call being connected and the call duration will be displayed.</p> <div data-bbox="826 624 1152 815" style="border: 1px solid black; padding: 5px; margin: 10px auto; width: fit-content;"> <p style="text-align: center;"><i>Name</i> 030611375 <i>Call duration</i></p> </div>
<div data-bbox="384 949 710 1140" style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Connecting <i>Name</i> 030611375</p> </div>	<p>As soon as a connection has been made, you will hear the call being connected and the call duration will be displayed.</p> <div data-bbox="826 1142 1152 1332" style="border: 1px solid black; padding: 5px; margin: 10px auto; width: fit-content;"> <p style="text-align: center;"><i>Name</i> 030611375 <i>Call duration</i></p> </div>


Procedure	What to do
<p>9.3 Selecting names by A-Z from the phone book memory</p> <p>This function can only be used when phone numbers have been entered into the phone book. See pages 67ff</p>	<p>When your phone is ready to use, i.e. you see the following display:</p> <div data-bbox="959 219 1286 412" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p><i>Your provider</i></p> <p><i>Time</i></p> <p><i>Date</i></p> <p><i>Your tel. number</i></p> </div> <p>press the  key for direct access to the mobile phone book, starting with the letter A. Press the  key again to call up the names, which will be shown in alphabetical order.</p>
<p>Selecting names by Z-A from the phone book memory.</p> <p>This function can only be used when phone numbers have been entered into the phone book. See pages 67ff</p>	<p>When your phone is ready to use, i.e. you see the following display:</p> <div data-bbox="959 790 1286 983" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p><i>Your provider</i></p> <p><i>Time</i></p> <p><i>Date</i></p> <p><i>Your tel. number</i></p> </div> <p>press the  key for direct access to the mobile phone book, starting with the letter Z. Press the  key again to call up the previous names in reverse alphabetical order.</p>



Display	Outcome / Tips
<div data-bbox="384 203 708 412" data-label="Image"> </div> <p data-bbox="341 454 743 741">It can take approx. one minute after switching on the mobile before it is ready for use. Until then, the message “SIM not ready” will be shown.</p>	<p data-bbox="762 215 1203 253">If you now press the green</p> <div data-bbox="762 255 852 389" data-label="Image"> </div> <p data-bbox="863 356 1251 439">key, a call will be made to this person.</p> <div data-bbox="762 577 1262 741" data-label="Text" style="border: 1px solid black; padding: 5px;"> <p data-bbox="767 589 1225 725">Names which you have entered starting with a number will be displayed in the phone book before the letter A.</p> </div>
<div data-bbox="384 781 708 990" data-label="Image"> </div> <p data-bbox="341 999 727 1205">It can take approx. one minute after switching on the mobile before it is ready for use. You will see the message:</p> <div data-bbox="389 1211 715 1400" data-label="Image"> </div>	<p data-bbox="762 799 1203 837">If you now press the green</p> <div data-bbox="762 840 852 974" data-label="Image"> </div> <p data-bbox="863 943 1251 1025">key, a call will be made to this person.</p>

Procedure	What to do
<p data-bbox="316 219 568 385">Direct dialling contacts in the phone book memory</p> <div data-bbox="316 768 585 1361" style="border: 1px solid black; padding: 5px;"> <p data-bbox="316 779 568 1025">This function can only be used when phone numbers have been entered into the phone book. See pages 67ff</p> <p data-bbox="316 1059 568 1305">If you have a new SIM card, you may find your service provider has already entered their customer services numbers.</p> </div>	<div data-bbox="603 174 866 342"> <p>When you have called up the phone book by pressing the</p> </div> <div data-bbox="927 174 1251 398" style="border: 1px solid black; padding: 5px;"> <p data-bbox="981 185 1190 226">Anton Smith</p> <p data-bbox="935 253 1214 353">Anton</p> </div> <p data-bbox="614 387 1182 510">  key, you can also access a specific entry directly. </p> <p data-bbox="603 555 1238 846"> Press the number key which has the first letter of the name you require. The position of the letter you require on the key shows the number of times you have to press this key in order to call up the first of the entries starting with this letter. </p> <p data-bbox="603 896 1230 974"> E.g.:   calls up the letter K </p> <p data-bbox="603 974 1241 1265"> on the number 5 key. Press the  key to call up the names, which will be shown in alphabetical order, or enter the second letter of the name you require (e.g. for King, press the number 4 three times for the I). </p>






Display	Outcome / Tips
	<p data-bbox="363 927 689 1137">A nameplate with a black header containing the name "Kevin" in white, and a grey body containing the name "Kevin" in large black font.</p> <p data-bbox="759 902 1203 943">If you now press the green</p> <p data-bbox="759 943 852 1077">A square icon with a white telephone handset on a grey background.</p> <p data-bbox="863 1048 1249 1126">key, a call will be made to this person.</p>

Procedure	What to do
<p data-bbox="316 161 523 286">9.4 Emergency group call</p> <div data-bbox="316 459 582 851" style="border: 1px solid black; padding: 5px;"> <p data-bbox="316 465 577 844">This function can only be used when at least one emergency call number is assigned to the numbers. See page 75.</p> <p data-bbox="316 891 550 1321">In addition, the function must have been previously activated in the extended settings (i.e. More). See page 95</p> </div>	<p data-bbox="603 201 1236 448">Hold the ,  or  key for three seconds. It does not matter which of the three keys you press. All three activate an emergency group call at the same time.</p> <p data-bbox="603 497 1236 660">You can interrupt and end an emergency group call at any time by pressing the red  key.</p> <div data-bbox="609 672 1257 1339" style="border: 1px solid black; padding: 5px;"> <p data-bbox="614 683 1220 795">Note: If the emergency group call function is not working properly, please check:</p> <ol data-bbox="614 801 1189 1041" style="list-style-type: none"> <li data-bbox="614 801 1189 873">1.: whether you have switched on the function in the More menu <li data-bbox="614 880 1189 1041">2.: whether the phone numbers to be alerted are correctly assigned to "Group call 1-3" and not to "Key 1-3" by mistake. <p data-bbox="614 1041 1236 1317">When you have switched on the emergency group call function but have not entered or assigned any Group call numbers, an SOS alarm signal will sound when you put out a group call but no text message will be sent. The word ERROR will be displayed.</p> </div>






Display	Outcome / Tips
<p>For approx. 1 minute, while an emergency call text message is sent, you will see:</p> <div data-bbox="384 371 708 564" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p style="background-color: black; color: white; text-align: center; margin: 0;">Emergency call</p> <p style="text-align: center;">Emergency call Please wait</p> </div> <p>You will hear a loud SOS signal as confirmation that this function has been carried out.</p> <p>While your mobile remains in automatic call answer mode, you will see the following message displayed:</p> <div data-bbox="389 1088 715 1281" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p style="background-color: black; color: white; text-align: center; margin: 0;">Emergency call</p> <p style="text-align: center;"><i>Time</i> <i>Date</i> <i>Phone number</i></p> </div>	<p>When you put out a group call, the following text message is sent to up to three different previously stored numbers:</p> <p>"<Your phone number> The sender of this SMS has put out an emergency call. Please call back immediately."</p> <p>For the next 20 minutes, your mobile will accept any incoming calls without you having to do anything at all and switches to handsfree.</p> <p>You can alert up to three people by pressing just one key. Callers who have received a text message can speak to you immediately when they call back.</p> <p>You can interrupt and end an emergency group call at any time by pressing the red  key.</p>

Procedure	What to do
<p>9.5 Using speed dial to call your mailbox (i.e. network operator's answering service)</p> <div data-bbox="311 1075 593 1361" style="border: 1px solid black; padding: 5px; margin-top: 20px;"> <p>This function can only be used when your phone number has been assigned to this key. See page 101.</p> </div>	<p>Press and hold the  key for two seconds.</p> <p>You will be connected to your network operator's computerised voicemail service without pressing any other keys.</p> <p>You can interrupt and end the call at any time by pressing the red  key.</p> <div data-bbox="608 790 1257 1361" style="border: 1px solid black; padding: 10px; margin-top: 20px;"> <p>Note: This mobile phone uses the mailbox settings already set by the network operator (calls are diverted to the mailbox (answering service) when you cannot be contacted or when your phone is switched off or engaged). It is not possible to change these settings with this phone via the menu. You can make changes by inserting the SIM card into another mobile phone or by entering the GSM code valid for all mobile phones into this phone (see page 144).</p> </div>






Display	Outcome / Tips
	<div data-bbox="384 203 708 389" style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center;">Connecting Mailbox 55001726204321</p> </div> <div data-bbox="384 450 708 636" style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Mailbox 55001726204321</p> </div> <p data-bbox="740 210 1257 456">As soon as the connection is made, you will hear the computerised voicemail announcement from your network operator. Please follow the instructions provided.</p> <p data-bbox="740 562 1270 730">0 This symbol on the keypad represents the recording function of the answering service (i.e. the mailbox).</p> <div data-bbox="759 741 1262 1391" style="border: 1px solid black; padding: 5px;"> <p>Switching off the mailbox function:</p> <p>When you want to switch off your mailbox and all the call diversion functions altogether, enter the key sequence ##002# and press the large green key with the handset symbol. If this is not possible or if you would like other call diversion functions, please contact your mobile phone dealer directly.</p> </div>

Procedure	What to do
<p data-bbox="316 161 534 286">9.6 Repeat dial- ling</p> <div data-bbox="311 1003 582 1361" style="border: 1px solid black; padding: 5px; margin-top: 20px;"> <p data-bbox="316 1012 577 1332">This function as- sumes that the mobile is ready for use (i.e. in standby mode) and is not switched off or that you are not making a call.</p> </div>	<p data-bbox="603 206 869 246">Press the green</p> <div data-bbox="603 246 699 380" style="display: inline-block; vertical-align: middle;">  </div> <p data-bbox="702 347 1220 436">key to call up the list of call op- tions for redialling.</p> <p data-bbox="603 481 1220 560">The phone offers the option of redial- ling the last number you called.</p> <p data-bbox="603 560 1220 600">By pressing once again on the green</p> <div data-bbox="603 600 699 734" style="display: inline-block; vertical-align: middle;">  </div> <p data-bbox="702 705 1220 795">key, the last number you called will be displayed.</p> <p data-bbox="603 828 1189 996">With the  key, you can call up one of the previous numbers you called for redialling.</p> <div data-bbox="877 1075 973 1209" style="display: inline-block; vertical-align: middle; margin: 20px 0;">  </div> <p data-bbox="603 1176 1236 1265">Press the green  key once again to call this number.</p>

Display	Outcome / Tips
<div data-bbox="383 219 710 414" style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center;">Dial ?</p> <p>Missed → Last number Received</p> </div> <p>Provided that the number dialled is stored as a contact name in the phone book, this name will also be displayed.</p> <div data-bbox="383 716 710 907" style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center;">Dial ?</p> <p><i>Name</i> 030611375 <i>Time Date</i></p> </div> <div data-bbox="383 952 710 1142" style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Connecting</p> <p><i>Name</i> 030611375</p> </div>	<p>As soon as a connection has been made, you will hear the call being connected and the call duration will be displayed.</p> <div data-bbox="805 414 1133 604" style="border: 1px solid black; padding: 10px; margin: 20px auto; width: fit-content;"> <p style="text-align: center;"><i>Name</i> 030611375 <i>Call duration</i></p> </div>














Procedure	What to do
<p>9.7 Calling back the number of the last caller</p> <div data-bbox="311 981 582 1339" style="border: 1px solid black; padding: 5px; margin-top: 20px;"> <p>This function assumes that the mobile is ready for use (i.e. in standby mode) and is not switched off or that you are not making a call.</p> </div>	<p>Press the green  key to call up the list of call options for redialling.</p> <p>Select "Received" using the  key.</p> <p>Press the green  key once again to display the phone number of the last call to be received.</p> <p>You can use the  key to call up one of the previous numbers for redialling.</p> <p>Press the green  key once again to call this number.</p>

 

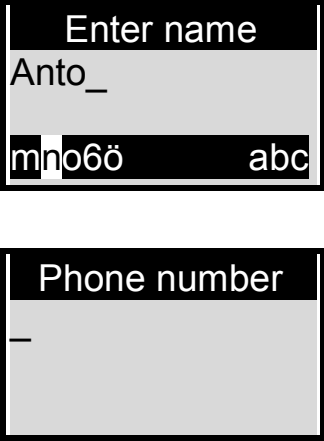 

Display	Outcome / Tips
<div data-bbox="384 203 708 389" style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center;">Dial ?</p> <p>Missed → Last number Received</p> </div> <div data-bbox="384 434 708 620" style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center;">Dial ?</p> <p>Last number → Received Missed</p> </div> <p data-bbox="341 678 724 887">Provided that the number dialled is stored as a contact name in the phone book, this name will also be displayed.</p> <div data-bbox="384 969 708 1155" style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center;">Dial?</p> <p style="text-align: center;"><i>Name</i> 030611375 <i>Time, Date</i></p> </div> <div data-bbox="384 1200 708 1386" style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Connecting</p> <p style="text-align: center;"><i>Name</i> 030611375</p> </div>	<p data-bbox="759 210 1257 374">As soon as connection has been made, you will hear the call being connected and the call duration will be displayed.</p> <div data-bbox="809 416 1133 602" style="border: 1px solid black; padding: 10px; margin: 10px auto; width: fit-content;"> <p style="text-align: center;"><i>Name</i> 030611375 <i>Call duration</i></p> </div> <div data-bbox="783 1077 1246 1341" style="border: 1px solid black; padding: 10px; margin: 10px auto; width: fit-content;"> <p>Note: If the caller has withheld their number, the message “Unknown number” will appear and you will not be able to use this function to call back.</p> </div>



Procedure	What to do
<p data-bbox="316 161 574 369">9.8 Calling back the number of the last missed call</p> <div data-bbox="311 981 582 1361" style="border: 1px solid black; padding: 5px; margin-top: 20px;"> <p data-bbox="316 990 574 1310">This function assumes that the mobile is ready for use (i.e. in standby mode) and is not switched off or that you are not making a call.</p> </div>	<p data-bbox="603 206 869 241">Press the green</p> <div data-bbox="606 246 699 380" style="display: inline-block; vertical-align: middle;">  </div> <p data-bbox="705 347 1220 430">key to call up the list of call options for redialling.</p> <p data-bbox="603 510 1212 548">Select "Missed" using the</p> <div data-bbox="1034 470 1133 548" style="display: inline-block; vertical-align: middle;">  </div> <p data-bbox="1141 510 1212 548">key.</p> <p data-bbox="603 698 1236 824">Press the green</p> <div data-bbox="877 593 973 728" style="display: inline-block; vertical-align: middle;">  </div> <p data-bbox="981 698 1236 824">key once again to display the phone number of the last missed call.</p> <p data-bbox="603 907 1252 1034">You can use the</p> <div data-bbox="885 862 981 940" style="display: inline-block; vertical-align: middle;">  </div> <p data-bbox="989 907 1252 1034">key to call up one of the previous numbers for redialling.</p> <p data-bbox="603 1220 1236 1303">Press the green</p> <div data-bbox="877 1120 973 1254" style="display: inline-block; vertical-align: middle;">  </div> <p data-bbox="981 1220 1236 1303">key once again to call this number.</p>

Display	Outcome / Tips
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Dial ?</p> <p>Missed → Last number Received</p> </div>	<p>As soon as a connection has been made, you will hear the call being connected and the call duration will be displayed.</p>
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Dial ?</p> <p>Received → Missed Last number</p> </div>	<div style="border: 1px solid black; padding: 10px; text-align: center;"> <p><i>Name</i></p> <p>030611375</p> <p><i>Call duration</i></p> </div>
<p>Provided that the number dialled is stored as a contact name in the phone book, this name will also be displayed.</p>	<div style="border: 1px solid black; padding: 10px;"> <p>Note: If the caller has withheld their number, the message “Unknown number” will appear and you will not be able to use this function to call back.</p> </div>
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Dial ?</p> <p><i>Name</i> 030611375 <i>Time Date</i></p> </div>	
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Connecting</p> <p><i>Name</i> 030611375</p> </div>	



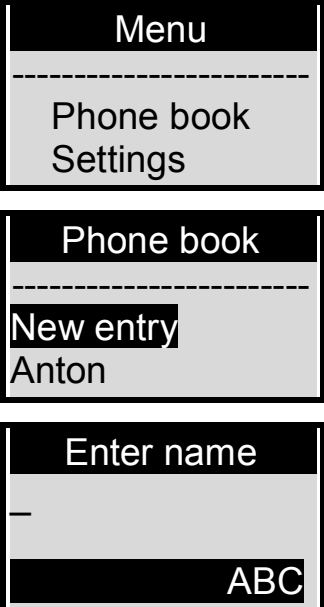




10 Storing phone numbers in the memory

Procedure	What to do
<p>10.1</p> <p>Phone book</p> <p>Storing a new entry</p> <p>Enter name</p>	<p>First press the  key,</p> <p>then the  key, and then</p> <p>press the  key once again.</p>
<p>NOTE: On switching on the mobile phone, it can take approx. one minute - depending on the number of entries in your phone book - before you can call up or edit stored numbers or store new numbers. The message SIM not ready. Please wait. will be displayed during this time.</p>	
<p>Phone book</p> <p>Saving a new entry</p> <p>Enter name</p> <p>E.g.: Anton</p>	<p>A = 1st letter, so press </p> <p>N = 2nd letter, so press  </p> <p>T = 1st letter, so press </p> <p>0 = 3rd letter, so press   </p> <p><u>Wait for two seconds.</u></p> <p>N = 2nd letter, so press  </p> <p>End entering the name by pressing the  green key.</p>







	Display	Outcome / Tips
		<p>You enter a name using the letters on the number keys. Names are stored in the phone book memory in alphabetical order. If you would like to store a name before the letter A, put a number in front of the name (e.g. "1Ursula")</p> <p>The first letter is capitalised automatically. To capitalise other letters, press the  key.</p>
		<p>When you press a number key, the other letters and characters that you can use with this number key are displayed on the bottom left. Press the key once again to call up the next letter or character. If you enter an incorrect letter or character, you can delete the previous entry by pressing the red  key.</p>


Procedure	What to do
<p data-bbox="316 192 395 226">10.2</p> <p data-bbox="316 277 536 315">Phone book</p> <p data-bbox="316 365 549 445">Saving a new entry</p> <p data-bbox="316 495 564 528">Enter number</p> <div data-bbox="316 790 580 1413" style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p data-bbox="316 797 576 1337">NOTE: On switching on the mobile phone, it can take approx. one minute - depending on the number of entries in your phone book - before you can call up or edit stored numbers or store new numbers. The message SIM not ready. Please wait. will be displayed during this time.</p> </div>	<p data-bbox="603 237 1246 483">You can only save a phone number to the phone book if you have first entered a name (see Chapter 10.1 above). If you do not enter a name, the phone number will be saved as the name.</p> <p data-bbox="603 580 1206 703">Enter the phone number you wish to save using the number keys in the usual way, e.g. 01805348243.</p> <p data-bbox="603 752 1241 871">Always enter the area dialling code for landline or the mobile phone network code.</p> <p data-bbox="603 882 1206 920">Complete your entry by pressing the</p> <div data-bbox="711 920 804 1055" style="text-align: center;">  </div> <p data-bbox="603 1025 1206 1099">green key. The phone number will then be saved.</p> <p data-bbox="603 1196 1193 1314">To cancel entering a number, press the</p> <div data-bbox="679 1234 772 1301" style="text-align: center;">  </div> <p data-bbox="603 1272 852 1314">key.</p>









Display	Outcome / Tips
<div data-bbox="384 241 708 427" data-label="Image"> </div> <p data-bbox="341 539 740 663">On completing an entry, the following is displayed:</p> <div data-bbox="384 680 708 869" data-label="Image"> </div> <p data-bbox="341 965 740 1133">When the 99 phone book spaces are taken, the following is displayed:</p> <div data-bbox="389 1144 715 1330" data-label="Image"> </div>	<p data-bbox="759 237 1267 450">After confirming the phone number you have just entered, the entry will be automatically stored and you will be able to make the next entry.</p> <p data-bbox="759 495 1267 707">All the entries in your mobile phone book are only stored on your SIM card. The maximum number of entries you can store is 99.</p> <div data-bbox="764 741 1267 1413" data-label="Text"> <p data-bbox="767 752 1251 1070">It's a good idea to enter all phone numbers with the international dialling code, so that you can dial straight through if on holiday abroad. The international code for Germany is +49. Leave off the first 0 of the area dialling code or mobile network after the +49. You enter the "+" by pressing the</p> <div data-bbox="772 1072 868 1144" data-label="Image"> </div> <p data-bbox="767 1115 1238 1328">key down for 2 seconds. If it's easier, you can enter 00 instead of the + sign. International dialling codes must always be- ing with a "+" sign or "00", e.g. Germany: +49 or 0049</p> </div>

Procedure	What to do
<p data-bbox="316 161 395 197">10.3</p> <p data-bbox="316 241 539 286">Phone book</p> <p data-bbox="316 376 545 465">Changing an entry</p> <div data-bbox="316 788 582 1429" style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p data-bbox="316 801 582 1236">NOTE: On switching on the mobile phone, it can take approx. one minute - depending on the number of entries in your phone book - before you can call up or edit stored numbers or store new numbers. The message SIM not ready. Please wait. will be displayed during this time.</p> </div>	<p data-bbox="603 241 1050 286">First, press the  key,</p> <p data-bbox="603 385 1177 474">then press the green  key. Select the entry required using the  key</p> <p data-bbox="603 555 1248 676">or by pressing the number key corresponding to the first letter of the name.</p> <p data-bbox="603 779 1145 824">Then press the green  key.</p> <p data-bbox="603 900 1216 990">Select "Change" using the  key and confirm by pressing the green  key.</p> <hr data-bbox="603 1214 1232 1218"/> <p data-bbox="603 1236 1200 1361">To cancel entering a number, press the  key.</p>











Display	Outcome / Tips
<div data-bbox="389 181 715 371"> <p>Menu</p> <hr/> <p>→ Phone book Settings</p> </div> <div data-bbox="389 394 715 584"> <p>Phone book</p> <hr/> <p>New entry Anton</p> </div> <div data-bbox="389 607 715 797"> <p>Phone book</p> <p>New entry</p> <p>Anton</p> <p>Berta</p> </div> <div data-bbox="389 819 715 1010"> <p>Anton</p> <hr/> <p>→ Call Change</p> </div> <div data-bbox="389 1032 715 1223"> <p>Anton</p> <p>Call</p> <p>→ Change</p> <p>Delete</p> </div> <div data-bbox="389 1245 715 1424"> <p>Enter name</p> <p>Anto_</p> <p>mno6ö abc</p> </div>	<p>Changing the name and/or the phone number is done in the same way as entering the data into the phone book for the first time (see Chapter 10.1).</p>

Procedure	What to do
<p data-bbox="316 161 395 197">10.4</p> <p data-bbox="316 241 539 286">Phone book</p> <p data-bbox="316 331 523 421">Deleting an entry</p> <div data-bbox="316 766 582 1406" style="border: 1px solid black; padding: 5px; margin-top: 20px;"> <p data-bbox="316 779 582 1317">NOTE: On switching on the mobile phone, it can take approx. one minute - depending on the number of entries in your phone book - before you can call up or edit stored numbers or store new numbers. The message SIM not ready. Please wait. will be displayed during this time.</p> </div>	<p data-bbox="603 241 1050 286">First, press the  key,</p> <p data-bbox="603 385 1177 474">then press the green  key. Select the entry required using the  key</p> <p data-bbox="603 555 1248 676">or by pressing the number key corresponding to the first letter of the name.</p> <p data-bbox="603 779 1145 824">Then press the green  key.</p> <p data-bbox="603 900 1184 990">Press the  key 2x to select "Delete".</p> <p data-bbox="603 1034 1168 1079">When you confirm the deletion by</p> <p data-bbox="603 1182 1232 1303">pressing the green  key, the entire entry will be irrevocably deleted with immediate effect.</p>

Display	Outcome / Tips
<div data-bbox="384 181 708 371"> <p>Menu</p> <hr/> <p>→ Phone book Settings</p> </div> <div data-bbox="384 394 708 584"> <p>Phone book</p> <hr/> <p>New entry Anton</p> </div> <div data-bbox="384 607 708 797"> <p>Phone book</p> <p>New entry Anton Berta</p> </div> <div data-bbox="384 819 708 1010"> <p>Anton</p> <hr/> <p>→ Call Change</p> </div> <div data-bbox="384 1032 708 1223"> <p>Anton</p> <p>Change → Delete Assign number</p> </div> <div data-bbox="384 1245 708 1435"> <p>Phone book</p> <hr/> <p>New entry Anton</p> </div>	<p>When you confirm the deletion</p> <div data-bbox="1129 248 1225 383">  </div> <p>by pressing the green key, the entire entry will be irrevocably deleted with immediate effect.</p>








Procedure	What to do
<p data-bbox="316 159 395 197">10.5</p> <p data-bbox="316 241 539 286">Phone book</p> <p data-bbox="316 331 555 421">Assigning an entry</p> <div data-bbox="311 741 584 1384" style="border: 1px solid black; padding: 5px; margin-top: 20px;"> <p data-bbox="316 748 579 1285">NOTE: On switching on the mobile phone, it can take approx. one minute - depending on the number of entries in your phone book - before you can call up or edit stored numbers or store new numbers. The message SIM not ready. Please wait. will be displayed during this time.</p> </div>	<p data-bbox="603 197 1050 241">First, press the  key,</p> <p data-bbox="603 338 1177 427">then press the green  key. Select the entry required using the  key</p> <p data-bbox="603 510 1281 633">or by pressing the number key corresponding to the first letter of the name.</p> <p data-bbox="603 734 1145 779">Then press the green  key.</p> <p data-bbox="603 808 1273 898">Press the  key 3x to select “Assign”.</p> <p data-bbox="603 904 1281 1128">When you confirm by pressing the green  key, you will see a list of the keys to which this number may be assigned.</p> <p data-bbox="603 1167 1233 1256">Using the  key, select the key to which you wish to assign the number.</p> <p data-bbox="603 1352 1241 1397">Press the green  key to confirm.</p>


Display	Outcome / Tips
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center; background-color: black; color: white; margin: 0;">Menu</p> <hr style="border-top: 1px dashed black;"/> <p>→ Phone book Settings</p> </div>	<p>The following keys are available for use in assigning phone numbers:</p>
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center; background-color: black; color: white; margin: 0;">Phone book</p> <hr style="border-top: 1px dashed black;"/> <p>New entry Anton</p> </div>	
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center; background-color: black; color: white; margin: 0;">Phone book</p> <p>New entry Anton Berta</p> </div>	
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center; background-color: black; color: white; margin: 0;">Anton</p> <hr style="border-top: 1px dashed black;"/> <p>→ Call Change</p> </div>	
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center; background-color: black; color: white; margin: 0;">Anton</p> <p>Delete → Assign number Delete assign</p> </div>	
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center; background-color: black; color: white; margin: 0;">Anton</p> <p>Group call 3 → Key I Key II</p> </div>	
	<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center; background-color: black; color: white; margin: 0;">Anton</p> <p>→ Key I Key II Key III Speed dial 2 Speed dial 3 Speed dial 4 Speed dial 5 Speed dial 6 Speed dial 7 Speed dial 8 Speed dial 9 Group call 1 Group call 2 Group call 3</p> </div>
	<div style="border: 1px solid black; padding: 5px;"> <p>NOTE: Ensure that the phone numbers for group calls are saved in the selection list under “Group call 1-3” and not under keys I-III ! Press briefly on keys I-III: the phone no. saved will be shown and can be called. Press on keys I, II or III for 3 seconds to put out an emergency group call.</p> </div>








Procedure	What to do
<p data-bbox="300 161 375 197">10.6</p> <p data-bbox="300 246 518 286">Phone book</p> <p data-bbox="300 336 526 459">Deleting assigned numbers</p> <div data-bbox="293 824 582 1361" style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p data-bbox="300 833 571 1339">NOTE: On switching on the mobile phone, it can take approx. one minute - depending on the number of entries in your phone book - before you can call up or edit stored numbers or store new numbers. The message SIM not ready. Please wait. will be displayed during this time.</p> </div>	<p data-bbox="603 197 1050 241">First, press the  key,</p> <p data-bbox="603 340 1177 430">then press the green  key. Select the entry required using the  key</p> <p data-bbox="603 510 1248 631">or by pressing the number key corresponding to the first letter of the name.</p> <p data-bbox="603 734 1145 779">Then press the green  key.</p> <p data-bbox="603 810 1177 900">Press the  key 4x to select "Delete assign".</p> <p data-bbox="603 909 1177 954">When you confirm by pressing the  green  key, you will see a list of the keys with numbers assigned.</p> <p data-bbox="603 1169 1193 1258">Using the  key, select the key you wish de-assign and confirm by  pressing the green  key.</p>

 
 

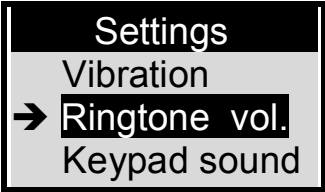 
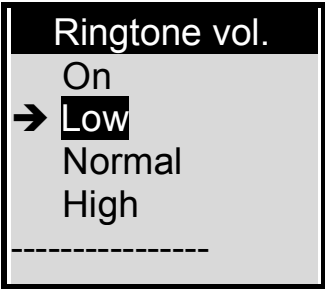 
Display	Outcome / Tips	
<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: black; color: white; text-align: center; padding: 2px;">Menu</div> <hr style="border-top: 1px dashed black;"/> <div style="padding-left: 20px;">→ Phone book Settings</div> </div>	<p>Numbers may be de-assigned from the following keys:</p>	
<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: black; color: white; text-align: center; padding: 2px;">Phone book</div> <hr style="border-top: 1px dashed black;"/> <div style="padding-left: 20px;">New entry Anton</div> </div>		<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: black; color: white; text-align: center; padding: 2px;">Anton</div> <div style="padding-left: 20px;">→ Key I Key II Key III Speed dial 2 Speed dial 3 Speed dial 4 Speed dial 5 Speed dial 6 Speed dial 7 Speed dial 8 Speed dial 9 Group call 1 Group call 2 Group call 3</div> </div>
<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: black; color: white; text-align: center; padding: 2px;">Phone book</div> <div style="padding-left: 20px;">New entry Anton Berta</div> </div>		
<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: black; color: white; text-align: center; padding: 2px;">Anton</div> <hr style="border-top: 1px dashed black;"/> <div style="padding-left: 20px;">→ Call Change</div> </div>		
<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: black; color: white; text-align: center; padding: 2px;">Anton</div> <div style="padding-left: 20px;">Settings → Delete assign</div> <hr style="border-top: 1px dashed black;"/> </div>		
<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: black; color: white; text-align: center; padding: 2px;">Anton</div> <div style="padding-left: 20px;">Group call 3 → Key I Key II</div> </div>		







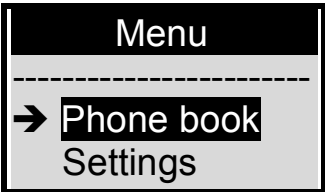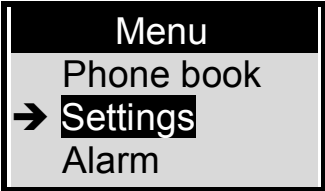

11 Settings


Procedure	What to do
<p data-bbox="316 264 391 297">11.1</p> <p data-bbox="316 344 456 387">Settings</p> <p data-bbox="316 477 501 555">Activating vibration</p>	<p data-bbox="603 344 1038 387">First, press the  key,</p> <p data-bbox="603 421 1201 504">then use the  key to select the “Settings” function.</p> <p data-bbox="603 611 1251 694">Press the green  key to confirm. Confirm the “Vibration” menu option by</p> <p data-bbox="603 795 1094 837">pressing the green  key.</p> <p data-bbox="603 871 1214 954">Using the  or  key, select the required setting and confirm by</p> <p data-bbox="603 1059 1094 1102">pressing the green  key.</p> <p data-bbox="603 1146 1219 1229">The function which is currently active is shaded and indicated by an arrow.</p>









	Display	Outcome / Tips
	<div data-bbox="384 315 708 506"> <p>Menu</p> <hr/> <p>→ Phone book Settings</p> </div> <div data-bbox="384 562 708 752"> <p>Menu</p> <p>Phone book</p> <p>→ Settings Alarm</p> </div> <div data-bbox="384 831 708 1021"> <p>Settings</p> <hr/> <p>→ Vibration Ringtone vol.</p> </div> <div data-bbox="384 1077 708 1267"> <p>Vibration</p> <p>Off</p> <p>→ On</p> </div>	<p>When switched on, the phone vibrates on receiving incoming calls.</p> <p>To quit the menu level currently displayed, press the red  key.</p>


Procedure	What to do
<p data-bbox="316 212 395 248">11.2</p> <p data-bbox="316 297 456 338">Settings</p> <p data-bbox="316 427 549 551">Setting the ringtone volume</p>	<p data-bbox="603 248 1038 293">First, press the  key,</p> <p data-bbox="603 327 1201 416">then use the  key to select the “Settings” function.</p> <p data-bbox="603 517 1225 562">Press the green  key to confirm.</p> <p data-bbox="603 595 1225 640">Confirm the “Ringtone vol.” menu op-</p> <p data-bbox="603 741 1225 786">tion by pressing the green  key.</p> <p data-bbox="603 819 1214 909">Using the  or  key, select the required setting and confirm by</p> <p data-bbox="603 1010 1098 1055">pressing the green  key.</p> <p data-bbox="603 1088 1217 1178">The function which is currently active is shaded and indicated by an arrow.</p>







Display	Outcome / Tips	
 <p>Menu ----- → Phone book Settings</p>	<p>While you are activating the ringtone volume, you will hear the volume currently selected.</p>	
 <p>Menu Phone book → Settings Alarm</p>		<p>To quit the menu level currently displayed, press the red  key.</p>
 <p>Settings Vibration → Ringtone vol. Keypad sound</p>		
<p>Setting options:</p>		
 <p>Ringtone vol. On → Low Normal High -----</p>		

 
 
 
 
Procedure	What to do
<p data-bbox="316 212 395 248">11.3</p> <p data-bbox="316 297 456 338">Settings</p> <p data-bbox="316 427 571 510">Setting the keypad sound</p>	<p data-bbox="603 248 1038 293">First, press the  key,</p> <p data-bbox="603 327 1201 416">then use the  key to select the “Settings” function.</p> <p data-bbox="603 517 1230 562">Press the green  key to confirm.</p> <p data-bbox="603 584 1262 685">Press the  key 2x to select the “Keypad sound” menu option and press</p> <p data-bbox="603 786 1118 831">the green  key to confirm.</p> <p data-bbox="603 864 1273 954">Using the  or  key, select the required setting and confirm by pressing</p> <p data-bbox="603 1055 943 1099">the green  key.</p> <p data-bbox="603 1133 1257 1223">The function which is currently active is shaded and indicated by an arrow.</p>







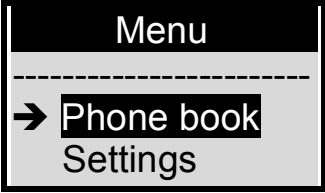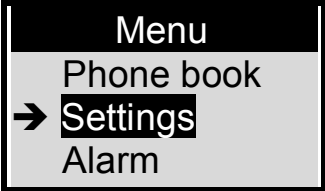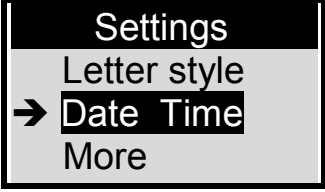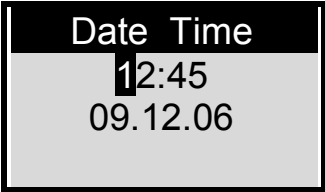

Display	Outcome / Tips
<div data-bbox="389 237 715 427" style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center; background-color: black; color: white; margin: 0;">Menu</p> <hr style="border-top: 1px dashed black;"/> <p>→ Phone book Settings</p> </div> <div data-bbox="389 524 715 714" style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center; background-color: black; color: white; margin: 0;">Menu</p> <p>Phone book → Settings Alarm</p> </div> <div data-bbox="389 853 715 1043" style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center; background-color: black; color: white; margin: 0;">Settings</p> <p>Ringtone vol. → Keypad sound Letter style</p> </div> <div data-bbox="389 1160 715 1350" style="border: 1px solid black; padding: 5px;"> <p style="text-align: center; background-color: black; color: white; margin: 0;">Keypad sound</p> <p>Off → On</p> </div>	<p>When the keypad sound is activated, you will hear a clicking sound when you press the keys.</p> <p>This function provides additional confirmation that you have used the keys properly.</p> <p>To quit the menu level currently displayed, press the red  key.</p>


Procedure	What to do
<p data-bbox="316 215 395 248">11.4</p> <p data-bbox="316 297 456 338">Settings</p> <p data-bbox="316 427 580 510">Setting the letter style</p>	<p data-bbox="603 248 1038 293">First, press the  key,</p> <p data-bbox="603 327 1201 416">then use the  key to select the “Settings” function.</p> <p data-bbox="603 517 1227 562">Press the green  key to confirm.</p> <p data-bbox="603 584 1270 685">Press the  key 3x to select the “Letter style” menu option and press the</p> <p data-bbox="603 786 1054 831">green  key to confirm.</p> <p data-bbox="603 909 1275 999">Using the  or  key, select the required setting and confirm by pressing</p> <p data-bbox="603 1099 943 1144">the green  key.</p> <p data-bbox="603 1178 1259 1267">The function which is currently active is shaded and indicated by an arrow.</p>





Display	Outcome / Tips
<div data-bbox="384 237 708 427"> <p>Menu</p> <hr/> <p>→ Phone book Settings</p> </div> <div data-bbox="384 465 708 656"> <p>Menu</p> <p>Phone book</p> <p>→ Settings Alarm</p> </div> <div data-bbox="384 685 708 875"> <p>Settings</p> <p>Keypad sound</p> <p>→ Letter style Date, Time</p> </div> <div data-bbox="384 904 708 1117"> <p>Letter style</p> <p>White on black</p> <p>→ Black on white High contrast</p> </div> <div data-bbox="384 1146 708 1337"> <p>Letter style</p> <p>Black on white</p> <p>→ White on black High contrast</p> </div>	<p>You can change the letter style by inverting, i.e. the light and dark areas and numbers are reversed.</p> <p>This function may be particularly useful for those with impaired vision.</p> <p>When “High contrast” is selected, the contrast in the display will be enhanced from the “normal” setting.</p> <p>To quit the menu level currently displayed, press the red  key.</p>


Procedure	What to do
<p data-bbox="316 215 395 248">11.5</p> <p data-bbox="316 297 456 338">Settings</p> <p data-bbox="316 427 542 551">Setting the date and the time</p>	<p data-bbox="603 293 1038 338">First, press the  key,</p> <p data-bbox="603 371 1201 456">then use the  key to select the “Settings” function.</p> <p data-bbox="603 562 1227 602">Press the green  key to confirm.</p> <p data-bbox="603 636 1235 721">Press the  key 4x to select the “Date Time” menu option and press</p> <p data-bbox="603 831 1118 871">the green  key to confirm.</p> <p data-bbox="603 916 1219 1001">Enter the correct time and date using the number keys.</p> <p data-bbox="603 1001 1161 1086">Enter 12:45 hrs on 9th December 2006 as 12 45 09 12 06.</p> <p data-bbox="603 1086 1158 1126">Confirm the entry by pressing the</p> <p data-bbox="603 1234 882 1274">green  key.</p>

 
Display	Outcome / Tips
   	<p>When the phone is supplied to you, the date and time will not be correctly pre-set. The date display could become corrupted when the battery is discharged.</p> <p>The time display does not re-set itself automatically when the clocks go forward or back for summer/winter time.</p> <p>If the battery is removed for a long period or is fully discharged, the date and time will need to be re-set.</p> <div data-bbox="871 1055 1142 1346" style="border: 1px solid black; padding: 5px; margin-top: 20px;"> <p>NOTE: Setting the size of the time display is described in Chapter 11.6.8.</p> </div>






Procedure	What to do
<p data-bbox="316 159 405 197">11.6.</p> <p data-bbox="316 241 456 286">Settings</p> <p data-bbox="316 371 564 416">More settings</p>	<p data-bbox="603 159 1038 241">First, press the  key,</p> <p data-bbox="603 248 1203 360">then use the  key to select the “Settings” function.</p> <p data-bbox="603 367 1230 501">Press the green  key to confirm.</p> <p data-bbox="603 508 1238 629">Press the  key 5x to select the “More” menu option and press the</p> <p data-bbox="603 636 1059 770">green  key to confirm.</p> <p data-bbox="603 815 1214 936">Using the  or  key, select the required option and confirm by</p> <p data-bbox="603 943 1098 1077">pressing the green  key.</p> <p data-bbox="603 1128 1222 1211">The function which is currently active is shaded and indicated by an arrow.</p>

 
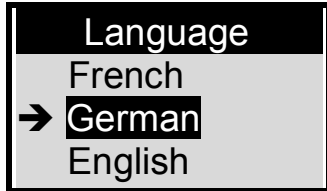 


Display	Outcome / Tips
	<p>As a rule the extended settings [More] are only rarely used, mainly to select the initial settings when getting started.</p> <p>The following functions are available for you to select:</p> <div data-bbox="810 510 1157 1093" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p style="text-align: center;">More</p> <hr style="border-top: 1px dashed black;"/> <p>→ Language Ringtone Emergency call SMS function Own number Mailbox Letter size Time Auto key lock Enter PIN Select network</p> </div> <p>To quit the menu level currently displayed, press the red  key.</p>
<div data-bbox="389 219 715 414" style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Menu</p> <hr style="border-top: 1px dashed black;"/> <p>→ Phone book Settings</p> </div>	
<div data-bbox="389 510 715 698" style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Menu</p> <p>Phone book</p> <p>→ Settings Alarm</p> </div>	
<div data-bbox="389 833 715 1025" style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Settings</p> <p>Date Time</p> <p>→ More</p> <hr style="border-top: 1px dashed black;"/> </div>	
<div data-bbox="389 1137 715 1330" style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">More</p> <hr style="border-top: 1px dashed black;"/> <p>→ Language Ringtone</p> </div>	





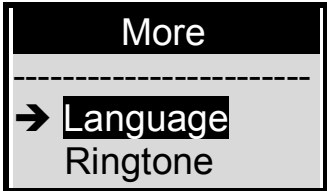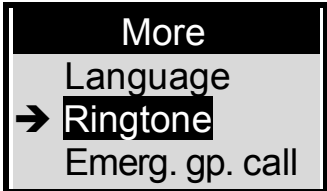

Procedure	What to do
<p data-bbox="316 161 422 197">11.6.1</p> <p data-bbox="316 241 544 286">More settings</p> <p data-bbox="316 376 517 456">Selecting a language</p>	<p data-bbox="603 241 1198 367">Using the  key, select the Settings function and then the More option (see Pages 89 ff - Item 11.6)</p> <p data-bbox="603 456 1206 537">The "Language" menu option will already be highlighted.</p> <p data-bbox="603 640 1107 721">Confirm by pressing the green  key.</p> <p data-bbox="603 801 1219 927">Press the  key repeatedly until you reach the required language and then confirm by pressing the green  key.</p> <p data-bbox="603 1120 1246 1245">The language option which is currently active is shaded and indicated by an arrow.</p>



 
 
 
Display	Outcome / Tips
	<p>Depending on the factory configuration, a number of different languages are available.</p> <p>To quit the menu level currently displayed, press the red  key.</p>







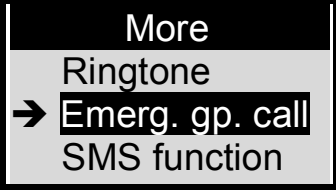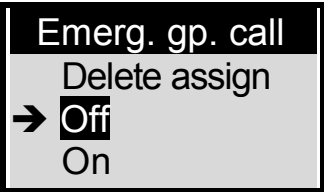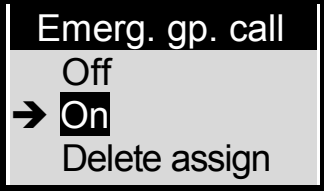


Procedure	What to do
<p data-bbox="316 159 427 197">11.6.2</p> <p data-bbox="316 241 544 286">More settings</p> <p data-bbox="316 376 512 459">Setting the ringtone</p>	<p data-bbox="603 159 1198 324">Using the  key, select the Settings function and then the More option (see Pages 89 ff - Item 11.6)</p> <p data-bbox="603 360 1252 488">Press the  key once to select the “Ringtone” option.</p> <p data-bbox="603 629 1107 719">Confirm by pressing the green  key.</p> <p data-bbox="603 797 1230 969">Press the  key repeatedly until you reach the required ringtone tune. When you select a tune, you will hear it play once. Confirm by pressing the</p> <p data-bbox="603 1070 884 1115">green  key.</p> <p data-bbox="603 1160 1198 1240">The tune which is currently active is shaded and indicated by an arrow.</p>

 
 
 
Display	Outcome / Tips	
 <p>A screenshot of a mobile phone menu. At the top, the word "More" is displayed in white on a black background. Below it, a dashed horizontal line separates the header from the list. The list contains two items: "Language" and "Ringtone". The "Language" item is highlighted with a black background and white text, and a right-pointing arrow is positioned to its left.</p>	<p>Depending on factory configuration, three ringtones are available. It is NOT POSSIBLE to save further ringtones on this phone or to download new ringtones from the internet or by SMS.</p>	
 <p>A screenshot of a mobile phone menu. At the top, the word "More" is displayed in white on a black background. Below it, the words "Language" and "Ringtone" are listed. The "Ringtone" item is highlighted with a black background and white text, and a right-pointing arrow is positioned to its left. Below "Ringtone" is the text "Emerg. gp. call".</p>		<p>To quit the menu level currently displayed, press the red  key.</p>
 <p>A screenshot of a mobile phone menu. At the top, the word "Ringtone" is displayed in white on a black background. Below it, the words "Tune 3", "Tune 1", and "Tune 2" are listed. The "Tune 1" item is highlighted with a black background and white text, and a right-pointing arrow is positioned to its left.</p>		





Procedure	What to do
<p data-bbox="316 161 427 197">11.6.3</p> <p data-bbox="316 241 544 286">More settings</p> <p data-bbox="316 376 568 539">Activating the emergency group call function</p> <div data-bbox="316 622 580 1361" style="border: 1px solid black; padding: 5px;"> <p data-bbox="316 631 560 931">NOTE: Ensure that the phone numbers for group calls are saved in the selection list under “Group call 1-3” and not under keys I-III !</p> <p data-bbox="316 936 560 1099">Press briefly on keys I-III: the phone no. saved will be shown and can be called.</p> <p data-bbox="316 1104 568 1308">Press on keys I, II or III for 3 seconds to put out an Emergency group call. (75).</p> </div>	<p data-bbox="603 197 1198 327">Using the  key, select the Settings function and then the More option (see Pages 89 ff - Item 11.6)</p> <p data-bbox="603 398 1185 497">Press the  key 2x to select the “Emerg. gp. call” option.</p> <p data-bbox="603 640 1107 725">Confirm by pressing the green  key.</p> <p data-bbox="603 801 1203 1061">Using the  or  key, you can select whether the Emergency group call function is switched on or off or whether all numbers assigned to the group call are to be deleted. Confirm your selection by pressing</p> <p data-bbox="603 1164 943 1205">the green  key.</p> <p data-bbox="603 1249 1219 1335">The function which is currently active is shaded and indicated by an arrow.</p>


Display	Outcome / Tips
	<p>To quit the menu level currently displayed, press the red  key.</p> <p>When you put out a group call, the following text message is sent to up to three different previously stored numbers: "<Your phone number> The sender of this SMS has put out an emergency call. Please call back immediately."</p> <p>For the next 20 minutes, your mobile will accept any incoming calls without you having to do anything at all and switches to handsfree.</p> <p>You can alert up to three people by pressing just one key. Callers who have received a text message can speak to you immediately when they call back.</p>
	
	
	
	

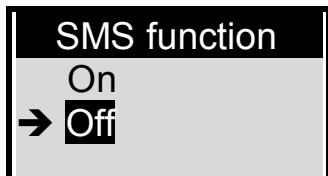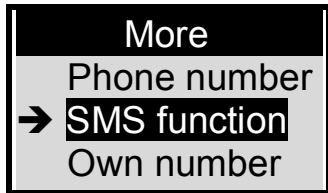 
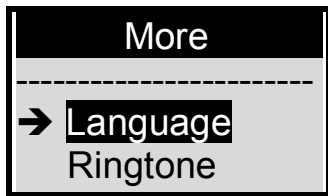 
Procedure	What to do
<p data-bbox="316 159 427 197">11.6.4</p> <p data-bbox="316 241 544 286">More settings</p> <p data-bbox="316 376 576 584">Activating the SMS (= text messaging) function</p>	<p data-bbox="603 197 1198 324">Using the  key, select the Settings function and then the More option (see Pages 89 ff - Item 11.6)</p> <p data-bbox="603 398 1236 495">Press the  key 3x to select the “SMS function” option.</p> <p data-bbox="603 645 1109 728">Confirm by pressing the green  key.</p> <p data-bbox="603 801 1246 929">Using the  or  key, you can select whether the SMS function is switched on or off</p> <p data-bbox="603 1032 1109 1115">Confirm by pressing the green  key.</p> <p data-bbox="603 1205 1220 1288">The function which is currently active is shaded and indicated by an arrow.</p>






Display	Outcome / Tips
	<p>When the SMS function is switched off, you cannot receive or send text messages. Nor will you be notified of any text messages which have been sent to you.</p> <p>The emergency group call function will of course remain operational – provided this is activated.</p> <p>To quit the menu level currently displayed, press the red  key.</p>

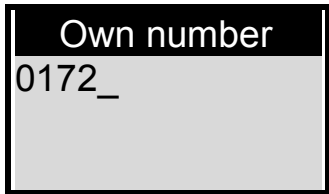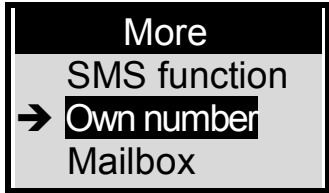


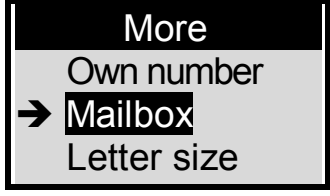 
Procedure	What to do
<p data-bbox="316 159 427 197">11.6.5</p> <p data-bbox="316 241 544 286">More settings</p> <p data-bbox="316 376 564 629">Entering your own phone number so that it is shown in the display</p>	<p data-bbox="603 159 1198 327">Using the  key, select the Settings function and then the More option (see Pages 89 ff - Item 11.6)</p> <p data-bbox="603 371 1235 495">Press the  key 4x to select the “Own number” option.</p> <p data-bbox="603 640 1107 725">Confirm by pressing the green  key.</p> <p data-bbox="603 770 1230 983">Using the number keys, enter your own mobile phone number. The number will then appear under the time and date in the display when the phone is ready to use.</p> <p data-bbox="603 1028 1158 1068">Confirm the entry by pressing the</p> <p data-bbox="603 1173 1246 1256">green  key. The phone is then no longer in input mode.</p>







Display	Outcome / Tips
	<p>This function is not essential but will make using the phone easier for you.</p> <p>When you press the green  key, you quit the input mode.</p> <p>NOTE: If you enter the number 9999, instead of your own phone number, the phone will re-set itself afresh.</p> <p>If you enter 9998, instead of your own phone number, the IMEI no. and the software status of the phone will be shown in the display. At the same time, the phone's call number memory (not the SIM!) will be deleted. On deleting the number 9998 as your own phone number, the IMEI no. will no longer be displayed.</p>




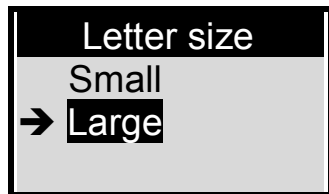 
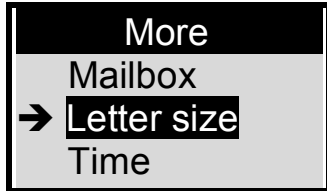 
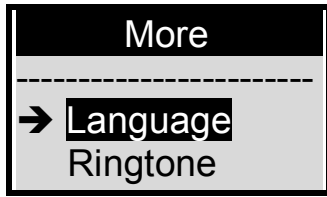 
Procedure	What to do
<p data-bbox="316 159 427 197">11.6.6</p> <p data-bbox="316 241 544 286">More settings</p> <p data-bbox="316 376 576 801">Entering your mailbox number (i.e. network operator's answering service) allowing you to pick up messages quickly and easily</p>	<p data-bbox="603 197 1198 324">Using the  key, select the Settings function and then the More option (see Pages 89 ff - Item 11.6)</p> <p data-bbox="603 398 1236 495">Press the  key 5x to select the "Mailbox" option.</p> <p data-bbox="603 600 1106 680">Confirm by pressing the green  key.</p> <p data-bbox="603 725 1214 931">Using the number keys, enter your own mailbox number. The number is automatically stored under the  key.</p> <p data-bbox="603 936 1230 1099">You can obtain the more detailed information about your mailbox number from your mobile phone network operator.</p> <p data-bbox="603 1149 1158 1189">Confirm the entry by pressing the</p> <p data-bbox="603 1294 1246 1375">green  key. The phone is then no longer in input mode.</p>







Display	Outcome / Tips
	<p>This function is not essential but will make using the phone easier for you.</p> <p>When you press the green</p>  <p>key, you quit the input mode.</p> <p>The phone number used to access your mailbox depends on your network provider. They can provide you with your mailbox number.</p> <p>There is information on setting the mailbox using GSM codes on page 144.</p>











Procedure	What to do
<p data-bbox="316 159 424 197">11.6.7</p> <p data-bbox="316 241 544 286">More settings</p> <p data-bbox="316 376 560 622">Changing the letter size in the phone book and the numbers entered</p>	<p data-bbox="603 197 1198 324">Using the  key, select the Settings function and then the More option (see Pages 89 ff - Item 11.6)</p> <p data-bbox="603 398 1236 495">Press the  key 6x to select the “Letter size” option.</p> <p data-bbox="603 600 1109 683">Confirm by pressing the green  key.</p> <p data-bbox="603 763 1214 891">Using the  or  key, select whether the letter size is to be displayed in large or small format.</p> <p data-bbox="603 996 1109 1079">Confirm by pressing the green  key.</p> <p data-bbox="603 1167 1220 1249">The function which is currently active is shaded and indicated by an arrow.</p>


Display	Outcome / Tips
	<p data-bbox="758 208 1273 544">This function allows you to reduce the size of the 1.8cm tall numbers and letters in the main area of the display to the normal size (as used in the top line of the display). This enables phone numbers and names to be displayed in full.</p> <p data-bbox="758 633 1262 801">To quit the menu level currently displayed, press the red  key.</p> <div data-bbox="847 1099 1185 1364" style="border: 1px solid black; padding: 5px; margin-top: 20px;"> <p>NOTE: Setting the size of the time display is described in Chapter 11.6.8.</p> </div>

 
 
 







Procedure	What to do
<p data-bbox="316 161 427 197">11.6.8</p> <p data-bbox="316 241 545 286">More settings</p> <p data-bbox="316 421 561 622">Changing the size of the time display on the idle screen</p>	<p data-bbox="603 241 1200 362">Using the  key, select the Settings function and then the More option (see Pages 89 ff - Item 11.6)</p> <p data-bbox="603 443 1232 542">Press the  key 7X to select the “Time” option.</p> <p data-bbox="603 645 1104 721">Confirm by pressing the green  key.</p> <p data-bbox="603 801 1216 936">Using the  or  key, select whether the letter size is to be displayed in large or small format.</p> <p data-bbox="603 1034 1104 1115">Confirm by pressing the green  key.</p> <p data-bbox="603 1205 1216 1294">The function which is currently active is shaded and indicated by an arrow.</p>

Display	Outcome / Tips
<div data-bbox="384 219 708 412" style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center; background-color: black; color: white; margin: 0;">More</p> <hr style="border-top: 1px dashed black;"/> <p style="margin: 0;">→ Language Ringtone</p> </div> <div data-bbox="384 508 708 701" style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center; background-color: black; color: white; margin: 0;">More</p> <p style="margin: 0;">Letter size</p> <p style="margin: 0;">→ Time Auto key lock</p> </div> <div data-bbox="384 813 708 1005" style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center; background-color: black; color: white; margin: 0;">Letter size</p> <p style="margin: 0;">Small</p> <p style="margin: 0;">→ Large</p> </div> <div data-bbox="375 1093 703 1301" style="border: 1px solid black; padding: 5px;"> <p style="text-align: center; background-color: black; color: white; margin: 0;"><i>Your provider</i></p> <p style="text-align: center; font-size: 2em; margin: 0;">13:59</p> </div>	<p data-bbox="759 208 1267 376">When the screen is idle, the time is displayed in extra large letter size. The date is no longer displayed.</p> <p data-bbox="759 465 1262 633">To quit the menu level currently displayed, press the red  key.</p> <div data-bbox="799 1005 1209 1366" style="border: 1px solid gray; padding: 10px; margin-top: 20px;"> <p data-bbox="807 1016 1166 1189">NOTE: If you would like to be able to read the time in the dark with the key lock on,</p> <p data-bbox="807 1234 1139 1355">press the red  key to illuminate the time.</p> </div>

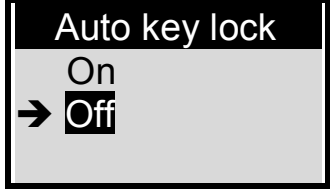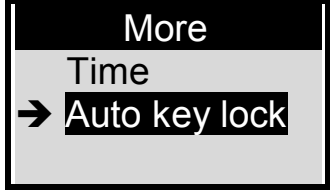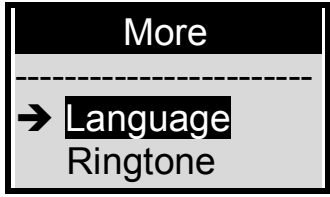





Procedure	What to do
<p data-bbox="316 161 424 197">11.6.9</p> <p data-bbox="316 241 564 286">More settings</p> <p data-bbox="316 376 571 542">Activating the automatic electronic key lock</p>	<p data-bbox="603 241 1200 362">Using the  key, select the Settings function and then the More option (see Pages 89 ff - Item 11.6)</p> <p data-bbox="603 443 1235 542">Press the  key 8x to select the “Auto key lock” option.</p> <p data-bbox="603 645 1107 721">Confirm by pressing the green  key.</p> <p data-bbox="603 801 1212 878">Using the  or  key, select whether the function is on or off.</p> <p data-bbox="603 990 1107 1066">Confirm by pressing the green  key.</p> <p data-bbox="603 1169 1219 1245">The function which is currently active is shaded and indicated by an arrow.</p>


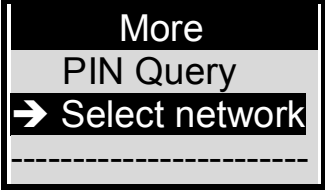 
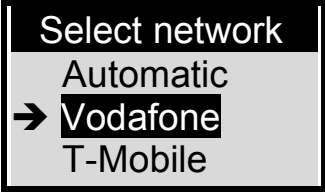 
Display	Outcome / Tips
	<p>The automatic key lock switches the manual key lock on automatically after approx. 60 seconds (when this has been deactivated by a call, for example), provided you do not make a call or press any of the keys.</p> <p>You always activate and deactivate the manual key lock or interrupt the automatic key lock by pressing the  key for three seconds. When the key lock is activated you will see the message:</p> <p>Key lock on the top line of the display. Incoming calls can still be taken using the call acceptance key. The lock is released for the duration of the call and is automatically reinstated again afterwards. You can still put out emergency group calls.</p>









Procedure	What to do
<p data-bbox="312 125 592 174">11.6.10</p> <p data-bbox="312 174 592 302">More settings</p> <p data-bbox="312 336 592 470">Switching off the PIN query function</p>	<p data-bbox="592 174 1596 336">Using the  key, select the Settings function and then the More option (see Pages 89 ff - Item 11.6)</p> <p data-bbox="592 380 1596 504">Press the  key 9x to select the “PIN query” option.</p> <p data-bbox="592 604 1596 694">Confirm by pressing the green  key.</p> <p data-bbox="592 761 1596 896">Using the  or  key, select whether the PIN query function is on or off.</p> <p data-bbox="592 996 1596 1086">Confirm by pressing the green  key.</p> <p data-bbox="592 1176 1596 1344">The function which is currently active is shaded and indicated by an arrow. For security purposes, you will need to enter your PIN once again.</p>

 
 
 
Display	Outcome / Tips
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center; background-color: black; color: white; margin: 0;">More</p> <hr style="border-top: 1px dashed black;"/> <p>→ Language Ring tone</p> </div>	<p>To change the status of the PIN query function, you must enter your PIN. The current status of the setting is also confirmed in the display. Please note that when the PIN query function is switched off, anyone who has access to your mobile phone or SIM card will be able to make unlimited calls.</p> <p>If you use a top-up card, only the credit which remains on the card can normally be used. However, if you have a permanent mobile phone contract and your mobile is stolen, it can be used until you instruct your network operator to block the number. You must therefore consider whether your convenience in switching off the PIN query is worth the risk.</p>
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center; background-color: black; color: white; margin: 0;">More</p> <p>Letter size → Enter PIN Select network</p> </div>	
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center; background-color: black; color: white; margin: 0;">Enter PIN</p> <p>On → Off</p> </div>	
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center; background-color: black; color: white; margin: 0;">PIN query</p> <p style="text-align: center;">Enter PIN</p> </div>	
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center; background-color: black; color: white; margin: 0;">PIN query</p> <p style="text-align: center;">Deactivated</p> </div>	
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center; background-color: black; color: white; margin: 0;">Note:</p> <p style="text-align: center;">Function not possible</p> </div>	

Procedure	What to do
<p data-bbox="316 161 443 197">11.6.11</p> <p data-bbox="316 241 564 286">More settings</p> <p data-bbox="316 376 587 501">Select network (abroad or in border areas)</p>	<p data-bbox="603 241 1200 367">Using the  key, select the Settings function and then the More option (see Pages 89 ff - Item 11.6)</p> <p data-bbox="603 443 1209 537">Press the  key 10x to select the “Select network” option.</p> <p data-bbox="603 645 1107 725">Confirm by pressing the green  key.</p> <p data-bbox="603 761 1251 931">Using the  or  key, select the mobile phone network you would like to use for transmission or switch to automatic network selection.</p> <p data-bbox="603 976 1251 1021">Confirm your selection using the green  key.</p> <p data-bbox="603 1205 1235 1330">The mobile phone network you have currently selected is shaded and is indicated by an arrow.</p>







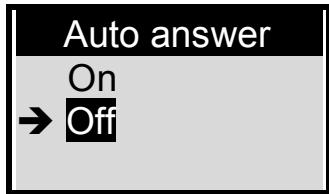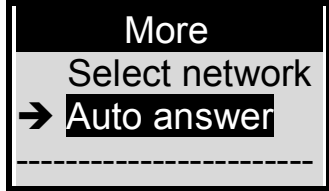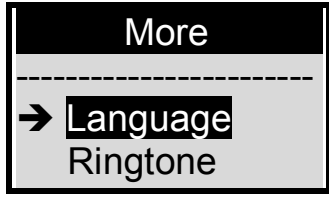

Display	Outcome / Tips
  	<p>While you remain in your country of residence, your mobile automatically transmits using the mobile phone network related to your SIM card. However, when abroad or in border areas, the phone automatically transmits using the mobile phone network with the best reception. If you prefer to use your home mobile phone network only in border areas, you have to select your “home network” manually. When abroad, it can also be cheaper to select a specific mobile phone network and not simply the one with the best reception. You can also select and confirm this manually.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>When a network is selected manually and the reception is too weak, the phone will not automatically search for a new network. Instead you will receive the message: Network search</p> </div>







Procedure	What to do
<p data-bbox="316 161 446 197">11.6.12</p> <p data-bbox="316 241 566 286">More settings</p> <p data-bbox="316 376 510 497">Automatic call acceptance</p>	<p data-bbox="603 241 1197 362">Using the  key, select the Settings function and then the More option (see Pages 89 ff - Item 11.6)</p> <p data-bbox="603 443 1209 542">Press the  key 11X to select the “Auto answer” option.</p> <p data-bbox="603 645 1109 721">Confirm by pressing the green  key.</p> <p data-bbox="603 801 1244 967">Using the  or  key to select whether you would like the automatic answering function to be switched on or off.</p> <p data-bbox="603 981 1248 1012">Confirm your selection using the green  key.</p> <p data-bbox="603 1209 1220 1326">The function which is currently active is shaded and is indicated by an arrow.</p>

Display	Outcome / Tips
	<p>Your mobile phone rings for approx. 10 seconds for an incoming call and then answers without you having to do anything. It switches to the hands-free function so that you can have a conversation without having to hold the mobile in your hand.</p> <p>This function is ideal for use by those who are bed-ridden or paralysed.</p> <div data-bbox="758 1187 1260 1361" style="border: 1px solid black; padding: 5px; margin-top: 20px;"> <p>As you have to switch this function on deliberately, unauthorised "eavesdropping" would not occur.</p> </div>



12 Alarm



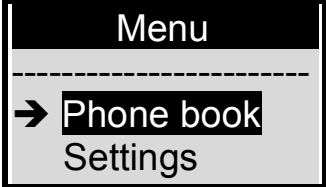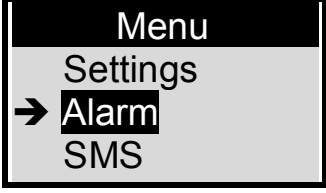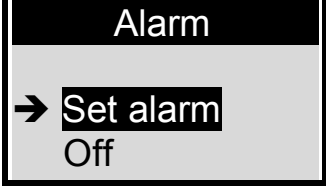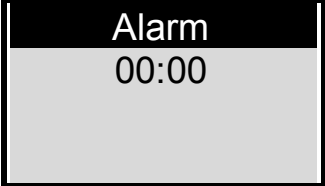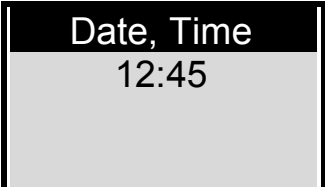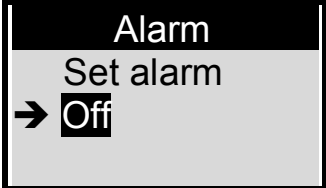




Procedure	What to do
<p data-bbox="311 185 363 219">12</p> <p data-bbox="311 230 555 353">Alarm</p> <p data-bbox="311 869 448 913">Setting</p> <p data-bbox="311 1171 496 1249">Switching off</p>	<p data-bbox="563 185 1241 342">First, press the  key, then press the  key 2x. Confirm the “Alarm”</p> <p data-bbox="563 353 1153 488">function using the green  key.</p> <p data-bbox="563 521 1230 689">Using the  and  keys, select whether the alarm function is one or off. Confirm your selection by pressing the</p> <p data-bbox="563 689 847 835">green  key.</p> <hr/> <p data-bbox="563 880 1249 958">Enter the time you wish to wake up using the number keys. For 12:45 hrs, enter</p> <p data-bbox="563 1059 1145 1149">1245. Confirm this using the green  key.</p> <hr/> <p data-bbox="563 1193 1214 1227">To switch the alarm off, select the “Off”</p> <p data-bbox="563 1328 1169 1417">option. Press the green  key to confirm.</p>


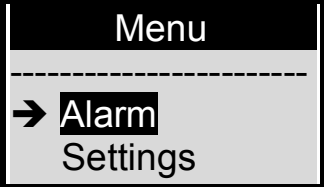 
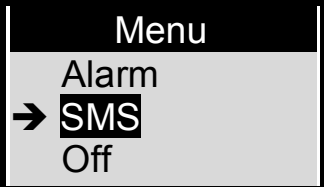 
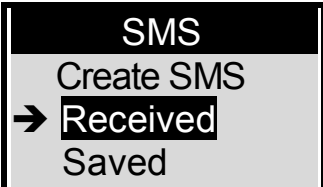 
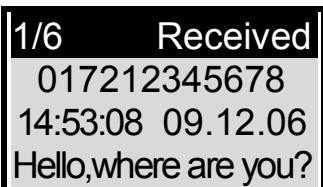 
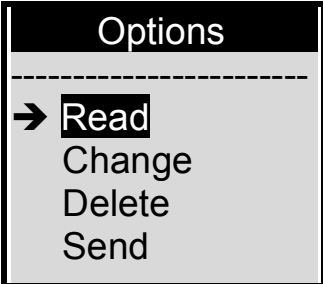 
Display	Outcome / Tips
 <p>Menu ----- → Phone book Settings</p>	<p>The alarm function repeats after 24 hours until you switch off the function using the “Alarm off” option.</p>
 <p>Menu Settings → Alarm SMS</p>	
 <p>Alarm → Set alarm Off</p>	
 <p>Alarm 00:00</p>	
 <p>Date, Time 12:45</p>	
 <p>Alarm Set alarm → Off</p>	




















13 Menu structure overview for SMS (text messaging)

 
 
 

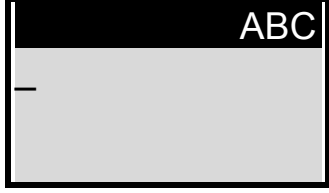 
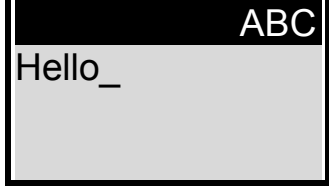 
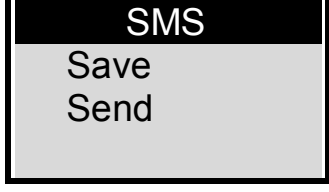 

SMS	Function	Follow-up function level 1	
	Create SMS	Send	
		Save	
	Received	Read	
		Change	
		Delete	
		Send	
	Saved	Read	
		Change	
		Delete	
		Send	
	Emerg. call text	Read	
		Change	
		Delete	
		Send	





	Follow-up function level 2	Follow-up function level 3
	Send to	
	Send	Send to
	Save	
	Delete	
	Send	Send to
	Save	
	Delete	
	Send to	
	Send	Send to
	Save	
	Delete	
	Send	Send to
	Save	
	Delete	
	Send to	
	Send	Send to
	Save	
	Delete	
	Send	Send to
	Save	
	Delete	
	Send	

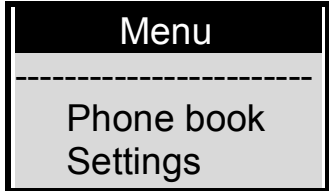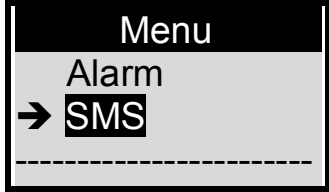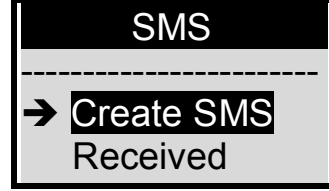

 
 
 
 
 
Procedure	What to do
<p data-bbox="316 163 391 197">13.1</p> <div data-bbox="316 203 587 421" style="background-color: black; color: white; padding: 10px; text-align: center;"> <p data-bbox="352 248 550 371">Text messaging =SMS</p> </div> <p data-bbox="316 465 579 712">Message on display advising that a text message (i.e. SMS) has been received.</p> <div data-bbox="316 1055 579 1417" style="border: 1px solid black; padding: 5px; margin-top: 20px;"> <p data-bbox="316 1066 558 1283">To use the SMS function, it must first be activated in the menu – see item 11.6.4 on page 97</p> </div>	<p data-bbox="603 188 1241 315">The message “Receive SMS” appears on the top line of the display accompanied by an acoustic signal. To read</p> <p data-bbox="603 353 1241 472">the text message, first press the  key, then press the  key 3x.</p> <p data-bbox="603 577 1241 667">Confirm “SMS” using the green  key.</p> <p data-bbox="603 696 1177 786">Press the  key 2x to select “Received”.</p> <p data-bbox="603 837 1241 1021">Confirm your selection by pressing the  green  key.</p> <p data-bbox="603 1070 1241 1312">The last text message to be received will be displayed. (For further information, see Chapter 13.5.) Call up the next SMS message using the  key.</p>

Display	Outcome / Tips
	<p>The message "Receive SMS" remains in the display when the phone is ready for use, until the next time you call up the SMS function in the menu.</p> <p>The various options available for SMS messaging are described in the following chapters:</p>
	 <p>Receive SMS Time Date Phone number</p>
	 <p>Menu ----- → Alarm Settings</p>
	 <p>Menu Alarm → SMS Off</p>
	 <p>SMS Create SMS → Received Saved</p>
	 <p>1/6 Received 017212345678 14:53:08 09.12.06 Hello,where are you?</p>
	 <p>Options ----- → Read Change Delete Send</p>

 
 

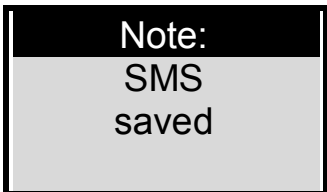 
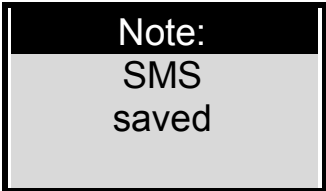 
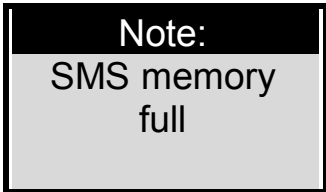 
Procedure	What to do
<p data-bbox="316 159 395 197">13.2</p> <div data-bbox="316 203 587 416" style="background-color: black; color: white; padding: 10px; text-align: center;"> <p data-bbox="352 248 550 371">Text messaging =SMS</p> </div> <p data-bbox="316 461 582 544">Creating a text message</p> <div data-bbox="316 1111 582 1397" style="border: 1px solid black; padding: 5px; margin-top: 20px;"> <p data-bbox="316 1122 571 1335">You may only enter and send text messages of up to 160 characters.</p> </div>	<p data-bbox="603 197 1286 320">First, press the  key, then press the  key 3x. Confirm "SMS" using the  key.</p> <p data-bbox="603 506 1262 589">Select "Create SMS" using the  key. Confirm your selection by pressing  the green  key.</p> <p data-bbox="603 775 1241 857">Now use the number keys to enter the text message, for example, Hello:</p> <p data-bbox="603 887 1190 947">H = 2nd letter, so press  </p> <p data-bbox="603 976 1090 1037">e = 2nd letter, so press </p> <p data-bbox="603 1066 1278 1104">l = 3rd letter, so press   </p> <p data-bbox="603 1111 967 1149"><u>Wait for two seconds.</u></p> <p data-bbox="603 1178 1278 1216">l = 3rd letter, so press   </p> <p data-bbox="603 1245 1270 1305">o = 3rd letter, so press   </p> <p data-bbox="603 1402 1225 1440">End by pressing the green  key.</p>





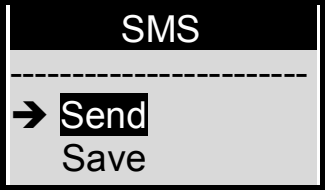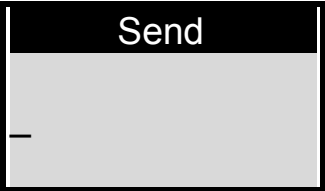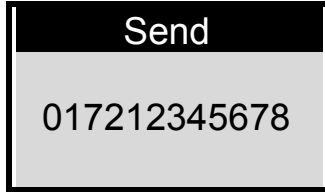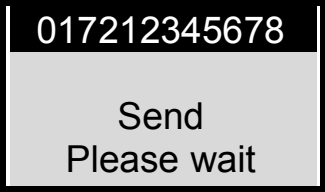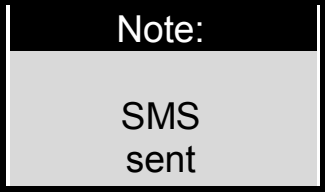

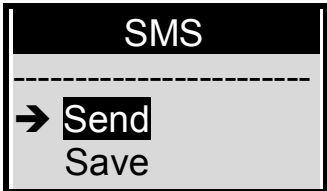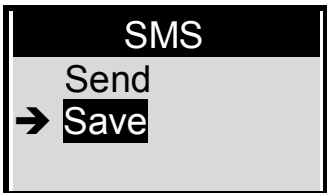

Display	Outcome / Tips
	<p>Texts are entered using the number keys. There is a guide to all the characters available on the fold-out cover at the back of this booklet.</p>
	<p>The first letter is automatically capitalised. If you press the</p>
	<p>on/off key  down for two seconds, the next letter will also be capitalised. You can check if text is entered in upper or lower case, i.e. ABC or abc, on the top right of the display.</p>
	<p>When you press one of the number keys, the letters and characters available on this key are shown on the top left of the display. Press this key again to call up the next character or letter.</p>
	<p>If you make a mistake, you can delete the last entry by</p>
	<p>pressing the red  key.</p>

Procedure	What to do
<p data-bbox="316 159 395 197">13.3</p> <div data-bbox="316 203 587 376" style="background-color: black; color: white; padding: 5px; text-align: center;"> <p data-bbox="352 248 550 369">Text messaging =SMS</p> </div> <p data-bbox="316 421 579 504">Sending a text message</p> <div data-bbox="316 622 579 1411" style="border: 1px solid black; padding: 5px;"> <p data-bbox="316 633 571 1317">Note: If you have read a text message already received or saved and then write a reply, the phone number of the person who sent you the text will be provided automatically when you send the message.</p> </div>	<p data-bbox="603 212 1241 380">When you have written your text message and confirmed it (see item 13.1), you can send the text message immediately. Confirm “Send” by pressing</p> <div data-bbox="774 383 866 517" style="text-align: center;">  </div> <p data-bbox="603 483 946 521">the green key.</p> <p data-bbox="603 571 1252 739">Enter the phone number you are sending the message to using the number keypad (or refer to the note on the left of this page) or</p> <p data-bbox="603 779 1252 985">using the  or  key select a contact from the phone book (see Chapter 9.3 “Selecting names from the phone book memory”).</p> <p data-bbox="603 1059 1189 1137">After entering or calling up the contact’s phone number, send the text</p> <div data-bbox="1137 1144 1230 1279" style="text-align: center;">  </div> <p data-bbox="603 1245 1129 1323">message by pressing the green key.</p>







Display	Outcome / Tips
	<p>You enter the text message using the number keys. There is a guide to all the characters available on the fold-out cover at the back of this booklet.</p> <p>The first letter is automatically capitalised. If you press the on/off key  down for two seconds, the next letter will also be capitalised. You can check if text is entered in upper or lower case, i.e. ABC or abc, on the top right of the display.</p> <p>When you press one of the number keys, the letters and characters available on this key are shown on the top left of the display. Press this key again to call up the next character or letter.</p> <p>If you make a mistake, you can delete the last entry by pressing the red  key.</p>
	
	
	
	
	

Procedure	What to do
<p data-bbox="316 161 395 197">13.4</p> <div data-bbox="316 203 588 376" style="background-color: black; color: white; padding: 5px; text-align: center;"> <p>Text messaging =SMS</p> </div> <p data-bbox="316 421 555 501">Saving a text message</p> <div data-bbox="311 1124 582 1415" style="border: 1px solid black; padding: 5px; margin-top: 20px;"> <p>You may only enter and send text messages of up to 160 characters.</p> </div>	<p data-bbox="603 188 1235 268">When you have written your text message and confirmed it (see item 13.1),</p> <p data-bbox="603 309 1241 430">you can use the  key to save the text message so that you can edit or send it later.</p> <p data-bbox="603 439 1228 479">Confirm “Save” by pressing the green</p> <div data-bbox="606 483 699 613" style="display: inline-block; vertical-align: middle;">  </div> <p data-bbox="705 582 775 622">key.</p>









Display	Outcome / Tips
	<div data-bbox="381 199 708 389">  <p>SMS</p> <p>→ Send Save</p> </div> <div data-bbox="381 427 708 618">  <p>SMS</p> <p>Send → Save</p> </div> <div data-bbox="387 656 715 846">  <p>SMS</p> <p>Save Please wait</p> </div> <div data-bbox="381 887 708 1077">  <p>Note: SMS saved</p> </div> <div data-bbox="758 203 1276 544"> <p>The text message (i.e. SMS) is saved on the SIM card. Depending of the number and length of the text messages already saved, the memory may be (almost) full. You will receive either of the following messages:</p> </div> <div data-bbox="807 602 1134 792">  <p>Note: SMS saved</p> </div> <div data-bbox="812 851 1139 1041">  <p>Note: SMS memory full</p> </div> <div data-bbox="758 1104 1256 1400"> <p>If the memory is full, you will have to delete previously saved text messages in order to be able to save the new message. You can generally save approx. 20 text messages on a SIM card.</p> </div>

Procedure	What to do
<p data-bbox="316 163 395 197">13.5</p> <div data-bbox="316 203 587 416" style="background-color: black; color: white; padding: 10px; text-align: center;"> <p data-bbox="352 248 550 367">Text messaging =SMS</p> </div> <p data-bbox="316 506 576 712">Calling up received or saved text messages</p>	<p data-bbox="603 197 1197 315">First, press the  key, and then press the  key 3x. Confirm</p> <p data-bbox="603 427 1185 510">"SMS" by pressing the green  key.</p> <p data-bbox="603 544 1174 627">Press the  key 2x to select "Received"</p> <p data-bbox="603 667 1185 750">Press the  key 3x to select "Saved".</p> <p data-bbox="603 768 1243 952">Confirm your selection by pressing the  green  key.</p> <p data-bbox="603 999 1241 1249">The last text message to be received will be shown. The phone number of the sender is shown on the top line, the date and time of receipt are on the second line and the first line of the message is underneath.</p> <p data-bbox="603 1290 1214 1373">Using the  key, call up the next text message.</p>






Display	Outcome / Tips
<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: black; color: white; text-align: center; padding: 2px;">Menu</div> <hr style="border-top: 1px dashed black;"/> <div style="padding: 5px;"> <p>→ Phone book Settings</p> </div> </div>	<p>On the left of the inverted headline on the display, you will find information about the number of messages received (1/6 means you have called up the first of 6 messages).</p>
<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: black; color: white; text-align: center; padding: 2px;">Menu</div> <div style="padding: 5px;"> <p>Alarm</p> <p>→ SMS</p> </div> </div>	
<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: black; color: white; text-align: center; padding: 2px;">SMS</div> <div style="padding: 5px;"> <p>Create SMS</p> <p>→ Received Saved</p> </div> </div>	<p>The various options available for SMS messaging are described in the following chapters:</p>
<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: black; color: white; text-align: center; padding: 2px;">1/6 Saved</div> <div style="padding: 5px;"> <p>017212345678 14:53:08 09.12.06 Hello,where are you?</p> </div> </div>	
<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: black; color: white; text-align: center; padding: 2px;">SMS</div> <div style="padding: 5px;"> <p>Received</p> <p>→ Saved Emerg. call text</p> </div> </div>	
<div style="border: 1px solid black; padding: 5px;"> <div style="background-color: black; color: white; text-align: center; padding: 2px;">1/6 saved</div> <div style="padding: 5px;"> <p>017212345678 14:53:08 09.12.06 Hello,where are you?</p> </div> </div>	

Procedure	What to do
<p data-bbox="316 159 422 197">13.5.1</p> <div data-bbox="316 203 587 416" style="background-color: black; color: white; padding: 10px; text-align: center;"> <p data-bbox="352 248 550 367">Text messaging =SMS</p> </div> <p data-bbox="316 461 576 712">Calling up and reading received or saved text messages</p>	<p data-bbox="603 159 1209 241">You have called up the required text message (see Chapter 13.5)</p> <div data-bbox="879 248 970 376" style="text-align: center;">  </div> <p data-bbox="603 349 1270 472">Using the green key, confirm your request to continue with this message. Confirm the suggested “Read” function</p> <div data-bbox="975 479 1066 607" style="text-align: center;">  </div> <p data-bbox="603 580 1222 703">by pressing the green key. The received text is then displayed in lines of up to 160 characters.</p> <p data-bbox="603 781 1289 904">Using the  or  key, find the text you want to display by scrolling up or down the messages.</p> <p data-bbox="603 911 1262 994">You can quit the Read option of the text messaging function by pressing the red</p> <div data-bbox="608 1001 699 1068" style="text-align: center;">  </div> <p data-bbox="708 1041 778 1079">key.</p> <hr style="border-top: 1px dashed black;"/> <p data-bbox="603 1126 1198 1164">After you have confirmed “Read” by</p> <div data-bbox="927 1171 1018 1299" style="text-align: center;">  </div> <p data-bbox="603 1272 1238 1435">pressing the green key, you can either send the message unchanged (see Chapter 13.3) or save it (see Chapter 13.4)</p>






Display	Outcome / Tips
<div data-bbox="384 181 708 371" style="border: 1px solid black; padding: 5px;"> <p>1/6 received 017212345678 14:53:08 09.12.06 Hello,where are you?</p> </div> <p style="text-align: center;">or</p> <div data-bbox="384 450 708 640" style="border: 1px solid black; padding: 5px;"> <p>1/6 saved 017212345678 14:53:08 09.12.06 Hello,where are you?</p> </div> <div data-bbox="384 734 708 925" style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Options</p> <hr style="border-top: 1px dashed black;"/> <p>→ Read Change</p> </div> <div data-bbox="384 969 708 1160" style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Read</p> <p>Hello, where are you? Waiting for you at the car. Rgds Tom</p> </div> <div data-bbox="384 1196 708 1386" style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">SMS</p> <p>Save → Send Received</p> </div>	<p>On the left of the inverted headline on the display you will find information about the number of messages received (1/6 means you have called up the first of 6 messages).</p> <p>On the right of the headline you will see whether you are in the menu for saved or received text messages.</p> <p>When you save a message you have “received” and read, it will also be stored in the saved messages area. You can then delete the message saved as a “received” item.</p>



Procedure	What to do
<p data-bbox="316 159 427 197">13.5.2</p> <div data-bbox="316 203 592 421" style="background-color: black; color: white; padding: 10px; text-align: center;"> <p data-bbox="352 248 555 371">Text messaging =SMS</p> </div> <p data-bbox="316 461 579 714">Calling up and changing received or saved text messages</p>	<p data-bbox="603 188 1209 271">You have called up the required text message (see Chapter 13.5)</p> <div data-bbox="879 271 975 405" style="text-align: center;">  </div> <p data-bbox="603 371 1273 454">Using the green  key, confirm your request to continue with this message.</p> <p data-bbox="603 495 1289 577">Using the  key, select the “Change” option and confirm by pressing the green</p> <div data-bbox="608 577 703 712" style="text-align: center;">  </div> <p data-bbox="603 678 1289 806">key. The end of the text appears in the display and lets you add new text or delete one space at a time in reverse by</p> <p data-bbox="603 846 1267 891">pressing the red  key. If you press</p> <p data-bbox="603 931 1273 1059">the red  key and hold for three seconds, the entire text message will be deleted.</p> <p data-bbox="603 1106 1241 1149">----- After you have confirmed “Change” by</p> <div data-bbox="927 1149 1023 1283" style="text-align: center;">  </div> <p data-bbox="603 1249 1289 1420">pressing the green  key, you can either send the message unchanged (see Chapter 13.3) or save it (see Chapter 13.4)</p>

Display	Outcome / Tips
<div data-bbox="384 185 708 371" style="border: 1px solid black; padding: 5px;"> <p>1/6 Received 017212345678 14:53:08 09.12.06 Hello,where are you?</p> </div>	<p>You may only enter text messages of up to 160 characters.</p>
<div data-bbox="384 398 708 584" style="border: 1px solid black; padding: 5px;"> <p>1/6 Saved 017212345678 14:53:08 09.12.06 Hello,where are you?</p> </div>	<p>It is not possible to “jump” around in the message, for example if you wish to make changes at the start only. In this case, you have to delete one space at a time in reverse until you reach the point where the change is to be made and then enter the new text.</p>
<div data-bbox="384 611 708 797" style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Options</p> <hr style="border-top: 1px dashed black;"/> <p>→ Read Change</p> </div>	
<div data-bbox="384 819 708 1005" style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Options</p> <p>Read → Change Delete</p> </div>	
<div data-bbox="384 1028 708 1214" style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Read</p> <p>Waiting for you at the car. Rgds Tom</p> </div>	<p>When you save a message you have “received” and read, it will also be stored in the saved messages area. You can then delete the message saved as a “received” item.</p>
<div data-bbox="384 1236 708 1422" style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">SMS</p> <p>Save → Send</p> </div>	

Procedure	What to do
<p data-bbox="316 161 427 197">13.5.3</p> <div data-bbox="316 206 587 421" style="background-color: black; color: white; padding: 10px; text-align: center;"> <p data-bbox="354 250 549 367">Text messaging =SMS</p> </div> <p data-bbox="316 465 577 672">Deleting received or saved text messages</p>	<p data-bbox="603 215 1209 295">You have called up the required text message (see Chapter 13.5)</p> <div data-bbox="880 300 970 430" style="text-align: center;">  </div> <p data-bbox="603 398 1184 524">Using the green  key, confirm your request to continue with this message.</p> <p data-bbox="603 564 1206 689">Press the  key 2x and select “Delete”.</p> <p data-bbox="603 739 1216 779">After you have confirmed your selec-</p> <div data-bbox="1046 784 1136 913" style="text-align: center;">  </div> <p data-bbox="603 882 1216 1048">tion by pressing the green  key, the selected text message will be irrevocably deleted with immediate effect.</p>

Display	Outcome / Tips
<pre> 1/6 received 017212345678 14:53:08 09.12.06 Hello,where are you? </pre>	
or	
<pre> 1/6 saved 017212345678 14:53:08 09.12.06 Hello,where are you? </pre>	
<pre> Options ----- -> Read Change </pre>	
<pre> Options Change -> Delete Send </pre>	
<pre> Note: SMS deleted </pre>	

Procedure	What to do
<p data-bbox="316 159 395 197">13.6</p> <div data-bbox="316 203 587 416" style="background-color: black; color: white; padding: 10px; text-align: center;"> <p data-bbox="352 248 550 371">Text messaging =SMS</p> </div> <p data-bbox="316 461 523 539">Emergency call text</p>	<p data-bbox="603 185 1230 342">First, press the  key, then press the  key 3x. Confirm "SMS" by</p> <p data-bbox="603 353 1251 622">pressing the green  key, then press the  key 3x. Confirm "Emerg. call text" selection by pressing</p> <p data-bbox="603 622 943 763">the green  key.</p> <p data-bbox="603 808 1187 931">You will see on the display the pre-entered emergency call text in the form of a text message.</p> <p data-bbox="603 976 1246 1099">To read, change, delete or send this message, please see Chapter 13.5 to 13.5.3.</p> <p data-bbox="603 1234 1203 1357">If you delete the text, the pre-programmed text will be restored on the phone.</p>

Display	Outcome / Tips
<div data-bbox="384 181 708 371"> <p>Menu</p> <hr/> <p>→ Phone book Settings</p> </div> <div data-bbox="384 394 708 584"> <p>Menu</p> <p>Alarm</p> <p>→ SMS</p> <hr/> </div> <div data-bbox="384 607 708 797"> <p>SMS</p> <hr/> <p>→ Create SMS Received</p> </div> <div data-bbox="384 819 708 1010"> <p>SMS</p> <p>Saved</p> <p>→ Emerg. call text</p> <hr/> </div> <div data-bbox="384 1032 708 1223"> <p>1/1 Emerg. call text</p> <p>The sender ..</p> </div> <p data-bbox="341 1240 692 1361">See Chapter 13.5 to 13.5.3 for further displays.</p>	<p data-bbox="759 159 1276 389">You enter the text message using the number keys. There is a guide to all the characters available on the fold-out cover at the back of this booklet.</p> <p data-bbox="759 394 1260 479">The first letter is automatically capitalised. If you press the</p> <p data-bbox="759 483 1257 815">on/off key  down for two seconds, the next letter will also be capitalised. You can check if text is entered in upper or lower case, i.e. ABC or abc, on the top right of the display.</p> <p data-bbox="759 819 1257 1084">When you press one of the number keys, the letters and characters available on this key are shown on the top left of the display. Press this key again to call up the next character or letter.</p> <p data-bbox="759 1088 1212 1173">If you make a mistake, you can delete the last entry by</p> <p data-bbox="759 1178 1212 1263">pressing the red  key.</p>

14 Other functions and instructions

14.1 SOS functions

1: Although your mobile phone may have picked up reception from a mobile phone network which is not related to your SIM card, you will still not be able to make or receive calls. However, it is possible to call the 112 emergency call number to speak to the nearest emergency call centre. You will be able to use this service from the information on the display.



2: Switch on your mobile and enter "112" instead of your PIN. Press the large green call acceptance key and your phone will call the nearest emergency call centre.

14.2 Using the phone without a SIM card


When you do not have a SIM card in your mobile phone, you cannot make or receive phone calls. However, once it is switched on, you can call the 112 emergency number and speak to the nearest emergency call centre (if this service is supported). You will be able to use this service from the information on the display.

NOTE: When you use the phone without a SIM card, the operating time of the mobile is significantly reduced.



14.3 No network reception

When your mobile phone is unable to find a suitable mobile phone network for your SIM card, you will see the message "network search" at the top of the display. Move to another position and try to stand with your

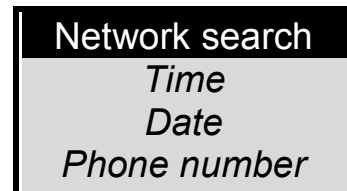

phone where there is better reception (e.g. outside the car or a reinforced concrete building). If you try to phone, the message "No network" appears in the display. If necessary, check the reception by using a SIM card issued by a different network operator.

14.4 Location finding

The mobile phone's location finding facility using the mobile phone network (GSM network) does not require any preparation of the phone itself. The location finding facility is provided by various network operators and service providers. You can find out more about the various suppliers on the internet. Your mobile phone dealer or network operator can provide you with further information.

Satellite location finding via GPS (Global Positioning System) is not possible with this phone.

14.5 Entering the PIN incorrectly three times

If the PIN number is entered incorrectly three times, the SIM card will be blocked. Your mobile will then ask you - when you switch it on - for your PUK (Personal Unblocking Key) and then for a new PIN. You have been given a second PIN - the PUK - for this case. Consult the documents or instructions provided by your network operator to find out how to unblock your SIM card. If you continue to enter the PIN incorrectly, you should contact your network operator, as your SIM card will then be completely blocked and can no longer be used. (See GSM codes on p.144)

14.6 Changing your PIN

Your mobile phone is not equipped with the function required for changing the PIN number of your SIM card. (See GSM codes on page 144)

14.7 Torch function

Your phone is fitted with 21 extremely bright white LEDs. Even when the phone is switched off, you can switch these on for 18

seconds by pressing and holding the direct dial or number keys for two seconds. This is intended to help you find your way in the dark. When the key lock is activated, switch the light on using the “Hang up” key.

14.8 Saving your phone book onto or from the SIM card

All the phone numbers and text messages which you save are only stored on your SIM card. It is not possible either to copy the data onto the phone’s memory or to copy the data using this phone.

14.9 Programming your phone to divert or forward calls

It is not possible to programme or change call diversions via a menu function on the mobile. Your mobile phone network provider provides these functions via specific key combinations – they or your dealer will be able to advise you about this. Your mobile phone supports these functions. (See GSM codes on page 144)

14.10 Restoring the factory settings (Reset)

If all of sudden your mobile phone fails to respond, you can reset the electronics, either by pressing the small round button on the left above the SIM card holder for two seconds or by removing the connection leads from the battery for 10 seconds.

You can restore the factory settings (for Settings) by entering the number 9999 as your own phone number (see Chapter 11.6.5 Page 99). The data stored in the phone book and text message memory on the SIM card will not be lost when you do this.

14.11 Calling up remaining credit / call time on a top-up card

Using specific key combinations, you can call up the remaining credit units and call time left on your top-up card. Your mobile

phone supports these functions. Your dealer or network operator will be able to advise you of the key combinations. A convenient way to call up this information in future is to save the key combinations on a direct dial or speed dial key.

14.12 Special messages on the display

Note SIM not ready Please wait SIM error

Please wait approx. 2 minutes until all the data on the SIM card has been processed by the phone.

Please check whether the SIM card is properly fitted and the holder closed.

Older SIM cards (before 2002) can cause problems when the phone is switched on. SIM card suppliers will normally exchange new cards for old ones free of charge.

Check whether you are still receiving an error message by using the SIM card from another network operator.

Note Check battery

There may be a problem with the battery or with the connection leads. Please check the battery and replace, if necessary.

Note GSM module error

Follow the instructions in Chapter 14.10. If the error persists, please refer to Chapter 15 F.

Garbled text message

Someone is sending you a text message with special characters or an MMS (text message with images), which cannot be read by the phone. This can also occur when using an old SIM card (see above).

Note 112 call only

If you have inserted a SIM card which also works in other mobile phones, this mobile phone will display "112 call only". Please re-insert the SIM card correctly. Please check using another SIM card, preferably one from another network operator. Check the SIM card holder (i.e. the part that flips up) for damage.

Older SIM cards (before 2002) can cause problems when the mobile is switched on. SIM card suppliers will normally exchange new cards for old ones free of charge.

Check whether you are still receiving an error message by using the SIM card from another network operator.

15 Trouble-shooting

If you encounter problems when using your phone, please feel free to contact us via our website www.fitage.com or our Helpline (the phone number on the back cover). You can obtain further information on trouble-shooting and our service provision from here, as well as on a range of questions you may have.

A.) Problem: It is not possible to switch on the phone or to recharge it. After attaching the charger, the “Battery charging” message does not appear in the display and the red LED top left does not light up.

Solution: It can take up to 4 minutes for the display to appear and for the red LED to light up when the battery is totally discharged.

Have you accidentally attached the charger to the earphone jack at the top on the side?

Check whether the charger is connected correctly and whether the charging process is underway. Check the mains voltage and if necessary use a different socket outlet. Check the power supply between the mobile phone and the battery and clean the contacts if necessary. The battery may be defective and should be replaced.

The keys and the display are lit up but there is no text:

Are you attempting to switch on the phone using a different key to the one with the green circle bottom left by mistake? Have you pressed the green circle key for at least 3 seconds?

B.) Problem: Outgoing call is not connected.

Solution: Move to another location, for example beside a window or in the open, until the display registers the signal strength. If the network is overloaded, you will have to try again later. Check whether you have dialled the correct number. Check whether there is still credit on your top-up card.

C.) Problem: Incoming call cannot be received

Solution: Try to establish a connection in order to check whether the mobile phone and network are in working order or whether reception is available. Check the call diversion function, in case this is activated, and if necessary deactivate it. Check your top-up card in case this is no longer activated.

D.) Problem: The sender's phone number does not appear when a call is received.

Solution: The phone number is always switched on automatically for transmission with this mobile phone. (It can be switched on or off using the GSM code on page 144.) If the phone number is not transmitted, it may be because the service was previously switched off on the SIM card (please switch the SIM card phone number transmission function back on using the GSM code or another mobile) or because the service was previously switched off by your network operator (please contact your network operator). The phone number display can be set using another mobile, your network provider's website or their Hotline. Using older SIM cards (before 2002) can lead to problems in transmitting the phone number. SIM card suppliers will normally exchange new cards for old ones free of charge. If possible, check by using the SIM card from another network operator.

E.) Problem: The phone cannot be used for the operating time indicated for calls or when switched on and ready for use (i.e. on standby).

Solution: The battery will only reach full capacity after several charge cycles.

If the battery is more than approx. 2 years old, it will no longer be capable of taking a full charge.

We obtained data concerning operating times during optimum network reception conditions, without additional use of the phone by switching on the keypad illumination or making phone calls. Whenever phone calls are made, the keys are used more frequently or where network reception is reduced, the phone consumes more energy and the battery performance is reduced (sometimes significantly). Therefore, for a phone which lies unused at home (within a reinforced concrete structure to exacerbate reception) and is 3 km from the transmission mast, the operating time is reduced to 3 days, as an example.

F.) Problem: There are problems with the mobile phone functions or the phone cannot be operated at all.

Solution: Open the battery compartment and flip the battery forwards. In the top left corner under the battery you will see a small button labelled RESET. Press this button for approx. 3 seconds using a pencil. If this does not solve the problem, remove the SIM card and the battery (also detaching the connection leads). Re-connect the battery and re-insert the SIM card. If you are still having problems, contact our Service Centre.

G.) Problem: Your mobile phone has gone missing.

Solution: Call your service provider immediately in order to prevent misuse. If you lose your phone or your SIM card, you will need the following information:

- The number of the SIM card (this is on the card)
- Your mobile phone number
- The 15-digit IMEI serial number for the phone (this is under the battery)
- Customer service number for your service provider

H.) Problem:

Your top-up card cannot be topped up or activated when entering the numbers. Control commands do not react when keyed into the language menu.

Solution: Press the keys very slowly (approx. one per second) in order to generate the DTMF tones (i.e. key tones) correctly.

GSM codes for mobiles

GSM codes are code numbers which allow all mobiles worldwide on the mobile phone network to set the various functions easily, thus preventing painstaking queries and entries in the menu of the mobile phone.

GSM codes often vary between mobile phone network operators. Please contact your mobile phone network operator if the codes listed below do not work on your phone.

- When you have entered a code, you must press the large green Enter key
- When calls are diverted to the mailbox, the phone number of your mailbox must be entered.
Please ask you mobile phone network operator about this.

Function	Comment		
	On/active	Off	Query
All diversions		## 002 #	
All conditional diversions (engaged, unobtainable, not answering)		## 004 #	
Change PIN	**04*old PIN*new PIN*new PIN#		
Change second PIN	**042*old PIN2*new PIN2*new PIN2# (for Phase 2 SIM cards only)		
New PIN using PUK	**05*PUK*new PIN*new PIN#		
New second PIN using PUK	**052*PUK*new PIN2*new PIN2# (for Phase 2 SIM cards only)		
Read off phone ID number (IMEI)			*#06#
Divert all calls [Difference here between (De-)activation (** resp.##) and (De-)registration (* resp. #).]	**21*Phone number# (On and active) *21# (active)	##21# (Off) #21# (Inactive)	*#21#
Display caller's number on receiver's phone (CLIP) (call number display)	*30#	#30#	*#30#
Display my number on receiver's phone (CLIR) (call number display)	*31# (for current call only) **31# (permanent setting)	#31# ##31# (permanent)	*#31#
Block outgoing calls	**33*Network operator block code#	#33*Block code#	*#33#
All call block functions	**330*Network operator block code#	#330*Block code#	*#330#
Block outgoing calls to abroad	**331*Network operator block code#	#331*Block code#	*#331#
Block outgoing calls to abroad except for calls on own network	**332*Network operator block code#	#332*Block code#	*#332#
Block all outgoing calls (mostly blocked by network operator)	**333*Network operator block code#	#333*Block code#	*#333#
Block all incoming calls	**35*Network operator block code#	#35*Block code#	*#35#
Block incoming calls when roaming in other networks (abroad)	**351*Network operator block code#	#351*Block code#	*#351#
Block all incoming calls (generally blocked by network operator)	**353*Network operator block code#	#353*Block code#	*#353#
Call waiting alert (when available)	*43#	#43#	*#43#
Call waiting alert during call	0 End call waiting/decline call waiting 1 End current call and take call waiting 2 Put current call on hold and take call waiting 3 Conference call for three (extra charge)		
Changing the delay until the mailbox responds	The mailbox switches on according to the network operator's setting, e.g. after 10 seconds. Other intervals are: 5, 10, 15, 20, 25 or 30 secs. For example, to set an interval of 15 seconds enter: **61*your internal mailbox number**15#		
Divert missed calls	**61*Phone number# (On and active) *61# (Active)	##61# (Off) #61# (Inactive)	*#61#
	Divert to mailbox off = **61*own number#		
Divert when unobtainable	**62*Phone number# (On and active) *62# (Active)	##62# (Off) #62# (Inactive)	*#62#
	Divert to mailbox off = **62*own number#		
Divert when engaged/busy	**67*Phone number# (On and active) *67# (Active)	##67# (Off) #67# (Inactive)	*#67#
	Divert to mailbox off = **67*own number#		
Display number I have dialled to call this recipient (COLP)	*76#	#76#	*#76#
Display own phone number on caller's phone	*77#	#77#	*#77#

16 Standard documentation

 
The information and illustrations contained in this publication are accurate at the time of going to press. However, they are subject to alteration. The manufacturer reserves the right to make changes to, add or withdraw products and services without prior notice. All products and services are subject to our terms and conditions of business, copies of which are available on request.

Declarations of conformity and certification concerning operating licences and approvals can be viewed at www.fitage.com.


17 Technical data

GSM class	4 (2 Watt)
Frequency range	880 – 960 MHz
GSM class	1 (1 Watt)
Frequency range	1710 – 1880 MHz
GSM class	1 (1 Watt)
Frequency range	1850 – 1990 MHz
Weight	215 g
Dimensions	179 x 68 x 23 mm
Li-Ion battery	1100 mAh, 3.7V
Operating temperature	- 10°C... 55°C
SIM card	3.0 Volt

18 Disposing of this product

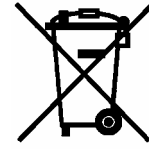

(Waste electrical and electronic equipment)

The marking on the product or on the packaging and literature accompanying the product  indicates that the product may not be disposed of with normal household waste at the end of its service life. Please dispose of this equipment separately to other types of waste to prevent causing damage to health and/or to the environment.

Private users may hand the phone and accessories in free of charge at municipal waste depots or recycling stations.

Batteries must not be disposed of in household refuse. Users are legally obliged to return used batteries. You can hand in your old battery at your local municipal waste depot or wherever batteries are sold. You are also welcome to send your battery and phone free of charge to the Service Centre mentioned in this booklet for disposal.

By law, the manufacturer and/or distributor in the respective country has a contract for waste disposal with an authorised company.

19 Terms of warranty:

Notwithstanding the right to claim for defects against the seller, the user (i.e. the customer) is granted a warranty according to the following conditions:

- New devices and their components which have proved to be defective within 24 months of the date of purchase due to defective workmanship and/or materials will be replaced or repaired at the discretion of the manufacturer free of charge to provide a device of the same technological standard. For parts subject to wear and tear (e.g. battery, keypad, housing, case – insofar as these are included in the scope of delivery), the warranty is valid for six months from the date of purchase.
- This warranty is not valid insofar as any defect on the device is the result of improper handling and/or failure to give due attention to the phone manual.
- This warranty does not extend to work undertaken by contract dealers or by customers themselves (e.g. installation, configuration, change of software). Manuals and any software supplied with the device by means of a separate data carrier are likewise exempt from the warranty. This also applies to SIM cards sent off with return goods. No liability is accepted for the whereabouts or use of unsolicited SIM cards which are sent off with return goods.
- The sales receipt with date of purchase is accepted as proof of warranty. Warranty claims are to be made within two months of a warranty case having been noted.
- Devices and/or components which are returned to the manufacturer as part of an exchange and are replaced become the property of the manufacturer.
- This warranty is valid for new devices purchased in the European Union. The guarantor is the manufacturer: .

fitage GmbH & Co. KG, Zur Waldau 15, D-68239 Mannheim. Please note that unsolicited return goods cannot be accepted at this address. In the event of a warranty claim, please contact the fitage Service Center (see back page), or - for our customers abroad - please contact the local authorised dealer.

- Any further or other claims on this manufacturer's warranty are exempt. The manufacturer accepts no liability for disruptions to service, loss of profit or loss of data, additional software or other information of any kind downloaded by the customer. The customer is responsible for safety in these cases. Exemption from liability does not apply where liability is mandatory, e.g. in accordance with product liability legislation, in cases of intent, gross negligence, due to loss of life, bodily injury or damage to health or due to the breaching of substantive contractual obligations. Claims to recover damages arising from a breach of substantive contractual obligations shall however be limited to foreseeable damage which is intrinsic to this type of contract insofar as there is no intent or gross negligence, or due to loss of life, bodily injury or damage to health, or due to a breach of substantive contractual obligations.
- The warranty period is not extended when the warranty is invoked.
- Where a warranty claim proves to be invalid, the manufacturer reserves the right to invoice the cost of replacement or repair to the customer. The manufacturer will advise the customer accordingly in advance.
- The above provisions do not imply a change in the burden of proof to the detriment of the customer.

20 Glossary

Chip card: = SIM card

Direct dial key: A separate key, to which you assign a specific phone number.

IMEI: (International Mobile Equipment Identifier) Unique identification number for your mobile. The IMEI no. is on the outside of the box in which you bought your phone or on a label in the battery compartment. See page 100 to display this number on your phone.

Incoming call: A call received on your mobile.

Mailbox: An answering service which records messages, which you can listen to on your mobile. These messages are saved on the computer of your network operator until you listen to them.

Missed call: Your mobile rings but you did not take the call.

Network operator (provider): A company which gives you access to the mobile phone network.

Outgoing call: A call made from your mobile.

PIN: (Personal Identification Number) Your personal code for your SIM card, which is issued to you with your SIM card.

PUK: (Personal Unblocking Key) The number which unlocks a blocked SIM card.

Reset: The function which resets the phone and its settings electronically to the factory settings.

SIM card: A plastic card with a tiny electronic memory (i.e. chip) which gives you access to the services of your network provider (= chip card).

SMS: (Short Message Service) Sending and receiving of text messages. SMS can be used colloquially to mean text messaging.

Speed dial key: A number key, to which you assign a specific phone number (make a call by pressing and holding the key).

Text message: = SMS








21 Index








Accepting/declining a call...(automatic – P.113)	45
Accepting/declining a call.....	45
Accessories.....	27
Activating the SMS (= text messaging) function	97
Activating the text messaging (=SMS) function.....	97
Activating vibration	80
Alarm clock.....	115
Answering service.....	see Mailbox
Antenna	26
Assigning a number	75
Assigning keys, operating the keys	153, 156
Automatic call acceptance	113
Automatic key lock	12, 105
Automatic phone network search	39
Battery and SIM card compartment.....	15
Battery.....	17
Calling back.....	63, 65
Calling your mailbox using speed dial.....	59
Changing an entry	71
Changing the letter size.....	103
Changing the size of time display.....	105
Changing the volume (handset).....	41
Changing the volume (ringtone).....	81
Changing the volume of incoming calls.....	41
Changing your PIN	138
Charger	21
Charging	31
Chip card	23, 33
Closing the battery compartment cover.....	35
Connecting a call.....	41
Contracts.....	23
Contrast	51
Deleting an entry	73
Deleting assigned numbers.....	77
Deleting the call number memory.....	100
Deleting the memory.....	100
Dialling	39

Direct dial	51
Display	13
Display	13
Display/hide/transmit phone number	142, 144
Disposing of this product	146
Editing/changing SMS text.....	117
133Editing/changing text messages (=SMS)	117
133Electronic key safety	12
Emergency call text.....	135
Emergency group call.....	57, 75, 95
Ending a call	43
Entering your mailbox number.....	101
Entering your own number	99
Entering your PIN.....	37
Glossary	149
Group calls.....	57, 75, 95
GSM codes	144
Handsfree function	43
Housing	10
Illumination of display	138
IMEI no. (identification).....	100, 149
Key safety / key lock	12, 105
Letter and characters assigned to keys	153, 156
Location finding.....	138
Mailbox settings	102, 144
Menu structure overview	47
Mobile phone contract.....	23
Mobile phone network operator/provider	23
More settings	89
Network operator.....	23
No network reception.....	137
Operating without a SIM card.....	137
Pocket lamp function	138
Provider	23
PUK	138
Repeat dialling	61
Reset	100, 139
Resetting the phone	100, 135
Saving a new entry	67, 69















Saving phone numbers permanently.....	67
Saving the phone book onto or from SIM card/device.....	139
Selecting a language	91
Selecting a network (abroad or in border areas)	107
Selecting a ringtone	93
Selecting from the phone book memory.....	53
Service advice	see back cover
Setting the date	87
Setting the keypad sound.....	84
Setting the letter style	85
Setting the ringtone volume	81
Setting the time.....	87
Setting the time.....	87
Setting up call divert/forward functions.....	139
Settings	80
SIM card	23, 33, 137
SMS menu structure overview	117
SOS function	137
Special messages in display	140
Speed dial	51
Standard documentation.....	145
Switching off PIN query function.....	109
Switching off.....	45
Switching on	37
Technical data	145
Terms of warranty	147
Top up card	139, 143
Top up cards.....	139, 143
Topping up top up cards	143
Torch function	138
Trouble shooting.....	141
Types of mobile phone contracts.....	23
Vicemail	see Mailbox
Warranty certificate.....	back inside cover

Quick guide to function keys

Keys	Press briefly	
	dials * (control symbol for special services, e.g. provided by network operator)	
	dials # (control symbol for special services, e.g. provided by network operator)	
	<ul style="list-style-type: none"> • calls the last name in the phone book • leafs backwards through phone book (i.e. previous name) • while making a call: increases handset volume • within the operating menu: calls up the previous function 	
	<ul style="list-style-type: none"> • calls the first name in the phone book on the display • leafs forwards through phone book (i.e. next name) • while making a call: reduces handset volume • within the operating menu: calls up the following function 	
	<ul style="list-style-type: none"> • calls up more operating functions 	
	<ul style="list-style-type: none"> • accept incoming call • dial number entered/displayed • displays list of dialled, received and missed calls • while making a call: press 2x = switches on handsfree function. Press again = switches off handsfree • confirms entry or query on operating menu 	
	<ul style="list-style-type: none"> • ends or declines a call • interrupts or cancels an entry in the operating menu • press several times: return to "normal" display (when ready to use, i.e. on standby) • deletes incorrect entries in reverse when creating a text message or entering numbers; press and hold to delete the all the line(s) currently being entered 	

	Page	Press for 2 seconds	In brief	Key
		Phone switches on (page 37) or electronic key lock (page 12)	On	
		Phone switches off (page 45)	Off	
	53 41 48ff		Up	
	53 41 48ff		Down	
	48ff		More	
	45 41 61 43		Accept call or yes	
	43 45	Deletes all of the text or number just entered.	End call or no	

Quick guide to number keys and direct dial keys

Key	Enter text	Press briefly	
	?!-1	dials 1	
	ABC2Ä	dials 2	
	DEF3	dials 3	
	GHI4	dials 4	
	JKL5	dials 5	
	MNO6Ö	dials 6	
	PQRS7ß	dials 7	
	TUV8Ü	dials 8	
	WXYZ9	dials 9	
	_(space) .,;: + 0	dials 0	
		The phone number saved for this key is shown on the display. (P. 51)	
		As for I	
		As for I	
	Switches to large letter size for following letters	dials *	

	Press for 2 seconds	Page
	☎ Calls the answering service provided by your network operator	59
	The phone number saved for this key is shown on the display panel.	51
	The phone number saved for this key is shown on the display panel.	51
	The phone number saved for this key is shown on the display panel.	51
	The phone number saved for this key is shown on the display panel.	51
	The phone number saved for this key is shown on the display panel.	51
	The phone number saved for this key is shown on the display panel.	51
	The phone number saved for this key is shown on the display panel.	51
	The phone number saved for this key is shown on the display panel.	51
	+ appears on the display panel to replace 00 for international dialling codes	70
	Emits a loud SOS signal. A text message is sent to all three stored emergency phone numbers simultaneously requesting a return call.	57
	As for I	
	As for I	
	Switches to large letter size for following letters	118

Notes:

Notes:

Service instructions

There may be a number of reasons why questions or problems arise when getting started and using your phone.

We can provide fast and personal assistance:

If you have any questions regarding the operation of your phone or any technical defects to report, please contact your local product-service first, then **fitage** at:

fitage Service and Support Centre

Tel. +49 (0)1805 348 243

Fax +49 (0)1805 348 244

email: service@fitage.com

You can find the answers to a range of questions by clicking on "Frequently Asked Questions" at **www.fitage.com**.

Keep these operating instructions, your sales receipt and the IMEI no. of your phone (see p. 149) close to hand.

If your phone has obvious technical defects, you will be given an address and RMA number for return of goods by our Service Centre, which you must quote on the warranty certificate and on the outside of the packaging of your return goods. Please send the phone to us together with the warranty certificate, a copy of the proof of purchase, the RMA no. and a precise description of the fault.

Do not send us your SIM card or any separately purchased accessories with your return goods.

Goods which are returned not prepaid, without an RMA no. or sent to company headquarters in Mannheim/Germany **will not be accepted.**

Warranty certificate

BIG EASY 2[®] Mobile Phone

IMEI no.: _____

The IMEI no. is on the outside of the box in which you bought your phone or on a label in the battery compartment. (see p. 149)

Accessories: _____

Description of fault: _____

RMA no. for return of goods : _____

(Please ask the Service Centre listed on the back for this before returning the goods.)

Purchaser:

Name, first name: _____

House number and street: _____

Town/city and postcode: _____

Tel. no. and email: _____

Date of purchase : _____ Attach receipt

Dealer's stamp
or original sales receipt

--

Service instructions

There may be a number of reasons why questions or problems arise when getting started and using your phone.

We can provide fast and personal assistance:

If you have any questions regarding the operation of your phone or any technical defects to report, please contact your local product-service first, then **fitage** at:

fitage Service and Support Centre

Tel. +49 (0)1805 348 243

Fax +49 (0)1805 348 244

email: service@fitage.com

You can find the answers to a range of questions by clicking on "Frequently Asked Questions" at **www.fitage.com**.

Keep these operating instructions, your sales receipt and the IMEI no. of your phone (see p. 149) close to hand.

If your phone has obvious technical defects, you will be given an address and RMA number for return of goods by our Service Centre, which you must quote on the warranty certificate and on the outside of the packaging of your return goods. Please send the phone to us together with the warranty certificate, a copy of the proof of purchase, the RMA no. and a precise description of the fault.

Do not send us your SIM card or any separately purchased accessories with your return goods.

Goods which are returned not prepaid, without an RMA no. or sent to company headquarters in Mannheim/Germany **will not be accepted.**